INSTALLATION INSTRUCTIONS AMBIANE XP56 PENDANT REMOTE

Anolis^e



1


The unit must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.

 
Λ

2



STEP 1 MOUNTING TO LOWER CEILING

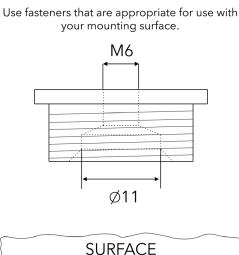




Fasten the Ceiling Plate M6i to the lower ceiling with suitable fastener.

SURFACE LOXEAL 5503


Screw the Spherical Cap (with the Hanging Wire) to the Ceiling Plate. Use of thread glue LOXEAL 5503 is recommended.

3

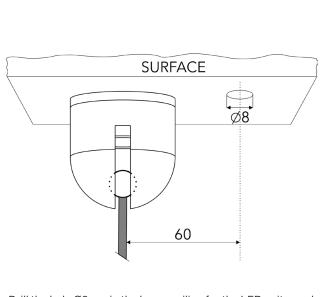

Drill the hole Ø8mm in the lower ceiling for the LED unit supply cable. If you wish to have the LED unit supply cable parallel with the hanging wire, the distance between the hanging wire and the LED unit supply cable should be 60mm.

STEP 2 CONTROL UNIT INSTALLATION

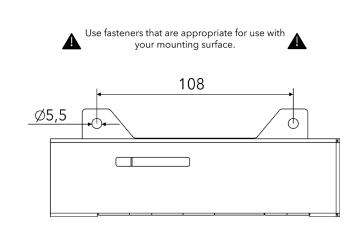

Fasten the control unit on the ceiling by means of two holes in the control units housing.

ROBE lighting s. r. o. | Palackeho 416 | 757 01 Valasske Mezirici | Czech Republic | Tel.: +420 571 751 500 | E-mail: info@anolis.eu | www.anolislighting.com



STEP 3

LED UNIT SUPPLY CABLE CONNECTION




3

Shorten power/data cable of LED unit to required length.




Strip these lengths of LED unit's cable for wiring connection.

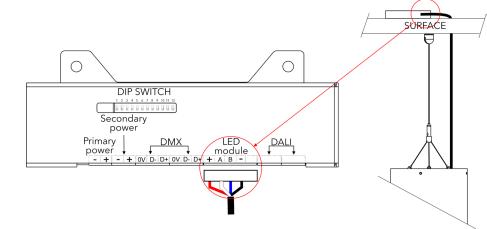

Pull the LED unit's cable through prepared hole in the ceiling and secure it above ceiling. Install a terminal block on the cable and connect it to the control unit.

STEP 4 PRIMARY POWER CONNECTION

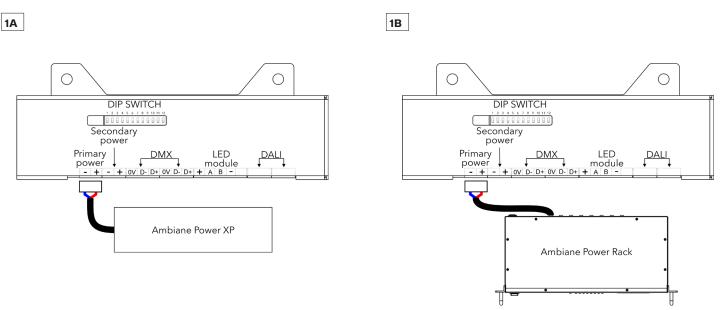


Install terminal block to power cable (from Ambiane Power Rack or Ambiane Power XP) and connect it to Primary power socket of the control unit.

ROBE lighting s. r. o. | Palackeho 416 | 757 01 Valasske Mezirici | Czech Republic | Tel.: +420 571 751 500 | E-mail: info@anolis.eu | www.anolislighting.com


Anolis^e

STEP 5 SECONDARY POWER CONNECTION 48V (PSU SCOPE OF OTHERS)

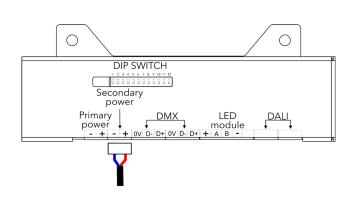

Install terminal block on Secondary power cable and connect it to Secondary power socket of the control unit.


STEP 6

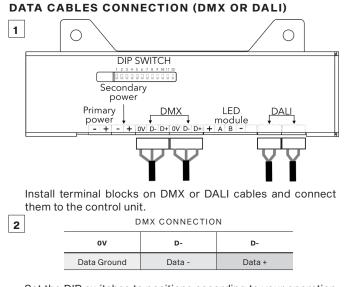


Set the DIP switches to positions according to your operation mode. The fixture can be controlled by DMX or DALI (switch 11 in OFF position).




1

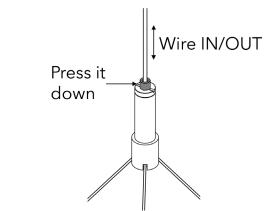


Press down the pin on the wires connector for length adjustment.

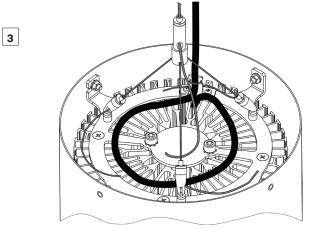

Store an redundant cable as instructed on the picture above. Maximum of one full loop to prevent overheating.

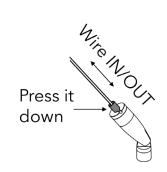

Press down pins on the hanging wires anchors for length and downward orientation adjustment.

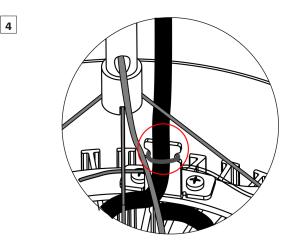

Fasten the LED unit's cable to holder using a cable binder.

ROBE lighting s. r. o. | Palackeho 416 | 757 01 Valasske Mezirici | Czech Republic | Tel.: +420 571 751 500 | E-mail: info@anolis.eu | www.anolislighting.com

2