







The unit must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations. This device falls under class I and must be grounded!



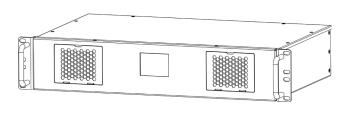

 
Rack




Wall mount

The ArcPower Unit Rack is designed for mounting into 19-inch equipment rack.


STEP 1 ARCPOWER UNIT CONNECTION

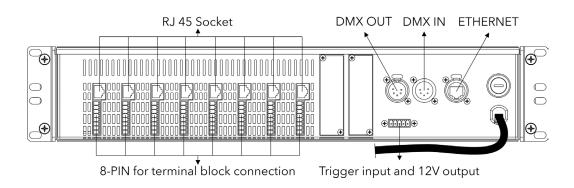

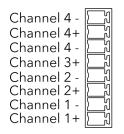

1 Channel 1 + 5 Channel 1 - 2 Channel 2 + 6 Channel 2 - 3 Channel 3 + 7 Channel 3 - 4 Channel 4 + 8 Channel 4 -

 8



8-PIN for terminal block connection

RJ 45 Socket

 
Trigger

INSTALLATION INSTRUCTIONS

ARCPOWER UNIT




STEP 2A ARCPOWER UNIT - RACK INSTALLATION






1

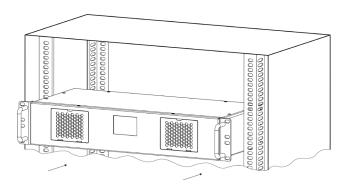


Install ArcPower Rack Unit into the rack case.

Fasten the ArcPower Rack Unit into rack by means of two screws on each side of the Ambiane Power Rack .

STEP 2B ARCPOWER UNIT - WALL MOUNT INSTALLATION

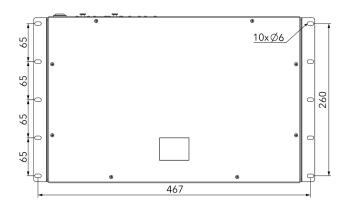

Holes spacing.

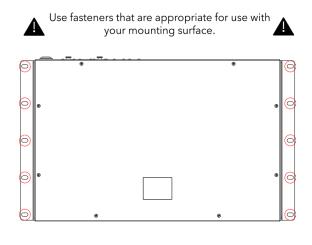

Drill holes to the surface according to holes spacing. Mount ArcPower Unit via mounting holes on the surface.

2