


# Eminere® 2 Wireless DMX Eminere® 3 Wireless DMX Eminere® 4 Wireless DMX

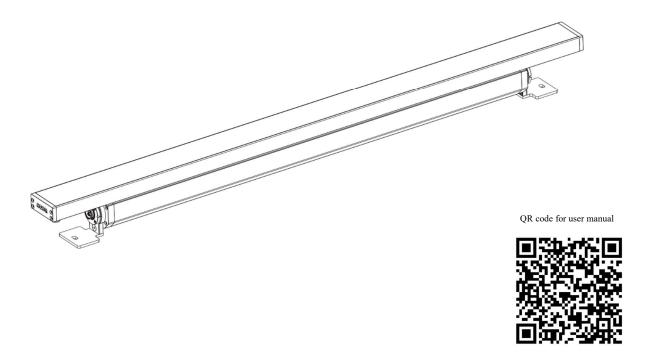

**USER MANUAL** 

# **Table of contents**

1. Safety instructions	3
2. Fixture exterior view	
3. Installation	
3.1 Mounting the fixture	5
3.2 Connection to mains	6
3.3 The Booster box	8
3.4 The Booster box installation	g
3.5 Jumper cable assembling	12
4. Technical specifications	
5. Cleaning and maintenance	18
5.1 Disposing of the product	18
6. ChangeLog	19

# FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE POWERING OR INSTALLING YOUR Eminere! Save it for future reference.

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure safe operation, it is absolutely necessary for the user to follow the safety instructions and warnings written in this manual.

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

Unauthorized modification will void warranty.

# 1. Safety instructions

#### DANGEROUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITHIN THIS UNIT!

This fixture should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied, consult your authorized distributor or local power company.

Always disconnect the fixture from AC power before cleaning, servicing or installing.

Make sure the data/power cable is not damaged by sharp edges. Check the fixture and the power cord from time to time.

Do not install the unit near an open flame.

During operation the housing becomes hot.

Refer servicing to qualified service personnel.

This fixture falls under protection class I. Therefore this fixture has to be connected to a mains socket outlet with a protective earthing connection.

Do not connect this fixture to a dimmer pack.

LED light emission. Risk of eye injury. Do not look into the beam from a short distance without suitable protective eyewear. Do not look at LEDs with magnifiers or similar optical instruments that may concentrate the light output.

The fixture was designed for outdoor use. This fixture must not be used for underwater installation.

When choosing the installation spot, please make sure that the fixture is not exposed to extreme heat or dust.

Avoid using the unit in locations subject to possible impacts.

The fixture body never must be covered with cloth or other materials when the fixture is under operation.

Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.

The fixture becomes hot during operation. Allow the fixture to cool approximately 30 minutes prior to servicing or maintenance.

Operate the fixture only after having familiarized yourself with its functions. Do not permit operation by persons not qualified to operate the fixture. Most damages are the result of unprofessional operation! Please consider that unauthorized modifications on the fixture are forbidden due to safety reasons!

Please use the original packaging if the fixture is to be transported.

If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the warranty becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burns, electric shock etc.

The product (covers and cables) must not be exposed to a high frequency electromagnetic field higher than 3V/m.

Immunity of the equipment is designed according to the standard EN 55035 Electromagnetic compatibility of multimedia equipment - Immunity requirements

Emission of the equipment complies with the standard EN55032 Electromagnetic compatibility of multimedia equipment – Emission Requirements according to class B.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.


The [Device] wireless operation is safe and complies to RF Exposure requirements.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning for fixtures with Harsh Environment Finish (HEF):
Handle with care!
Avoid any damage to the painted surface.
Damaging the paint may result in corrosion and loss of warranty.

# 2. Fixture exterior view

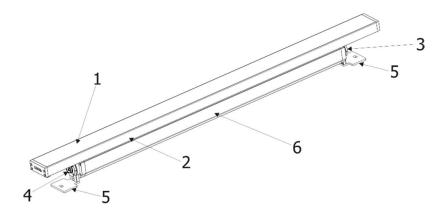


- 1. Transparent glass cover
- 2. LED module
- 3. Output connector
- 4. Input connector
- 5. Mounting brackets
- 6. Aluminium base

# 3. Installation

# 3.1 Mounting the fixture

The Eminere can be arranged in any orientation on a flat, non-flammable surface by means of two mounting brackets (5), the LED module (2) can be tilted (+95°/-95°) to get access to mounting brackets (5).

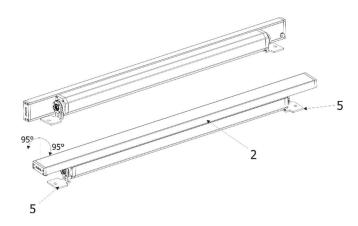

Ensure that the structure to which you are attaching the unit is secure.

#### 3.2 Connection to mains


The unit must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.

This device falls under class one and must be grounded!

The Eminere is equipped with auto-switching power supply that automatically adjusts to any 50/60Hz AC power source from 120-277 Volts.

The following wiring of the input/output connectors applies to the fixtures marked X on their labels only. Older versions of the Emineres have swapped D- and D+ and do not have mark X on their labels.



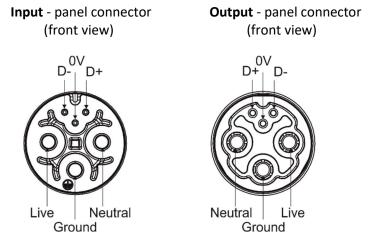

Fixture's Amphenol connectors are dust and water protected according to IP 67 by mating with related Amphenol connectors.

They cannot stay disconnected outdoor.


The output panel connector at last fixture in the Emineres chain has to always be covered with the water-tight cap to keep declared IP rating.


Do not connect (disconnect) Emineres to the Booster box and each other when they are under voltage!

Direct visibility between a transmitter and the Eminere Wireless DMX must be ensured without no obstacles (bildings, trees,....).


Distance between a DMX transmitter and the Eminere Wireless DMX depends on transmission range of used DMX transmitter, surrounds etc (we recommend to test behaviour of DMX transmitter with the Eminere Wireless DMX before installation).

#### **Examples of connection**





#### Wireless DMX to wire DMX



The Eminere can be only linked to a transmitter by running the link procedure at DMX transmitter .

The Eminere can be unlinked from the transmitter by running the unlink procedure at DMX transmitter or by switching off/on the Eminere three times while the transmitter is switched off.

During off/on unlink procedure, the Eminere has to be switched on for 5 seconds in steps 1-3:

Step 1: Eminere Off, Eminere On (5seconds)

Step 2: Eminere Off, Eminere On (5seconds)

Step 3: Eminere Off, Eminere On (5seconds)

Step 4: Eminere Off, Eminere On

Successful unlink is signalized by flashing LEDs at fourth switching the Eminere Off and On. If the LEDs flashing will not appear, probably the 5 seconds period has not been kept and you have to repeat the Off/On procedure to unlink the fixture from the DMX transmitter .

# DMX addressing of connected Emineres has to be done manually by means of the Robe Universal Interface WTX and the software RDM Manager.

The tables below state max. theoretical number of Emineres connected in series without Booster boxes.


EMINERE 2 wireless DMX	Voltage								
Cable length *	120V	190V	230V	277V					
10 m	32	32	32	32					
20 m	32	32	32	32					
30 m	28	32	32	32					
50 m	17	32	32	32					
70 m	12	31	32	32					
100 m	9	21	32	32					

EMINERE 3 wireless DMX	Voltage							
Cable length *	120V	190V	230V	277V				
10 m	28	32	32	32				
20 m	28	32	32	32				
30 m	19	32	32	32				
50 m	12	29	32	32				
70 m	8	21	31	32				
100 m	6	15	21	31				

EMINERE 4 wireless DMX	Voltage								
Cable length *	120V	190V	230V	277V					
10 m	21	32	32	32					
20 m	21	32	32	32					
30 m	15	32	32	32					
50 m	9	22	32	32					
70 m	6	16	23	32					
100 m	4	11	16	23					

<sup>\*</sup> Cable length is a total cable length among connected Emineres Side including power cable of the first Eminere Side.

Example: Total cable length=L1+L2+L3



# 3.3 The Booster box

To compensate a voltage drop in a large installation, the Booster boxes have to be connected in the chain of Emineres.


The following tables give numbers of Emineres after which the Booster box has to be installed in the chain of Emineres.

EMINERE 2 Wireless DMX	Max. possible number of Emineres 2 Wireless DMX = 32								
		Voltage							
Cable length	120V	190V	230V	277V					
10 m	-	-	-	-					
20 m	-	-	-	-					
30 m	28	-	-	-					
50 m	17	-	-	-					
70 m	12,24,	31	-	-					
100 m	9,18	21	31						

EMINERE 3 Wireless DMX	Max. po	essible number of Emir	neres 3 Wireless DMX	= 32					
		Voltage							
Cable length	120V	190V	230V	277V					
10 m	28	-	-	-					
20 m	28	-	-	-					
30 m	19	-	-	-					
50 m	12,24	29	-	-					
70 m	8,16,24	21	31.	-					
100 m	6,12,18,24,30	15,30	21	31					

EMINERE 4 Wireless DMX	Max. possible number of Emineres 4 Wireless DMX = 32									
		Voltage								
Cable length	120V	190V	230V	277V						
10 m	21	-	-	-						
20 m	21	-	-	-						
30 m	15,30	-	-	-						
50 m	9,18,27	22	-	-						
70 m	6,12,18,24,30	16	23	-						
100 m	4,8,12,16,20,24,28	11,22	16	23						

Example: E-box Daisy, Power supply= 120V, Cable length=70m, fixture=Eminere 2 wireless DMX The Booster box has to be connected after every 12th Eminere 2 wireless DMX (fixture 12 and fixture 24) from 32 fixtures.

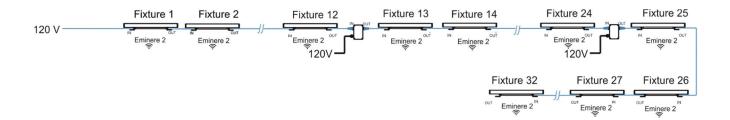


# 3.4 The Booster box installation

# ALWAYS DISCONNECT THE EMINERES FROM MAINS BEFORE CONNECTING/DISCONNECTING THE BOOSTER BOX.

The Booster box falls under protection class I. Therefore, every Booster box has to be connected to a mains socket outlet with a protective earthing connection.

- 1.Unscrew the four screws (1) from the cover (2) on the Booster box to get access to the terminal block (3) and two mounting holes of diameter of 4.6 mm (4).
- 2. Screw the Booster box on a non-flammable flat surface and connect cables.

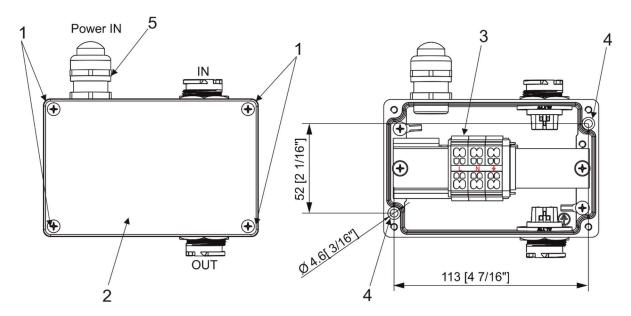


The Cable gland M20x1.5 for Power IN (5) is intended for a cable of a diameter of 7-13mm. Remove the end cap from the cable gland before passing the cable.

#### Power connection

	L	N	(earth)
Core (EU)	Braun	Blue	Green/yellow
Core (US)	Black	White	Green


We recommend to apply an adequate layer of the paste LOCTITE 5331 on the plastic holder of the cable gland before inserting it into the body of the gland and an adequate layer of the paste LOCTITE 577 on the thread of the gland body in case of unscrewing the cable gland from the housing of the buster box and repeatedly screwing it back to the housing .

#### Cable gland M20 MS:

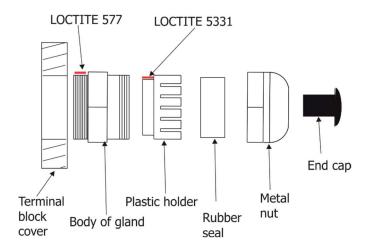


The cable gland M20 MS with a standard seal serves for a cable of diameter of 6-12mm, for smaller diameter of cable (4-8mm) you have to remove the original seal from the cable gland M20 and use the enclosed reducing seal instead of it. The reducing seal for diameter of cable 4-8mm (P/N 13051388) is enclosed in the Booster box.

**Standard seal** - part of cable gland M20 x 1.5 (for diameter of cable: 7-13mm)



**Reducing seal** (P/N 13051388) - enclosed, standard seal has to be removed before installing this seal (for diameter of cable: 4-8mm)



3. Screw the cover (2) back on the Booster box.

# 3.5 Jumper cable assembling


1. Dismantle the connector and slide its parts onto the cable (6).

Use the seal with inner diameter of 14.5 mm for the Anolis cable (P/N 13053138 or P/N 13053139).

The seal with inner diameter of 14.5 mm serves for cable of diameter 10-14.5 mm.


The seal with inner diameter of 10 mm serves for cable of diameter 8-10mm.

#### Parts of the connector

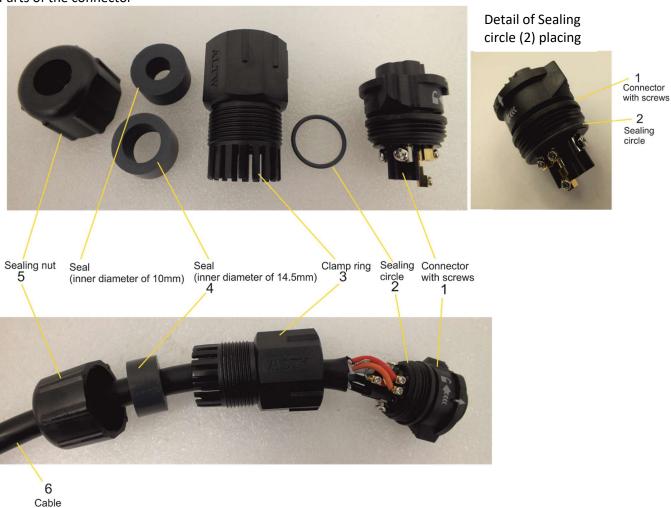


- 2. Put the seiling circle (2) on the connector with screws (1).
- 3. Remove insulation from the cable (6) and from individual wires and fasten three terminals on data wires.

#### CE version

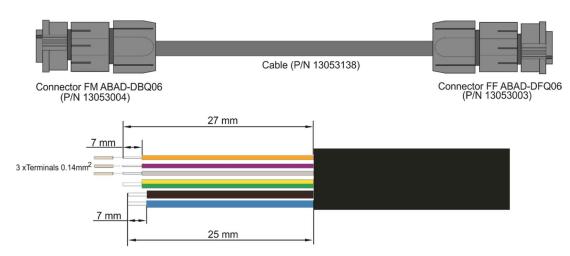


#### **US** version

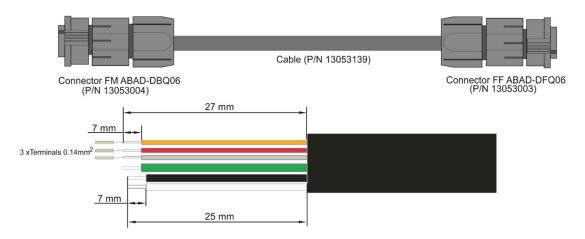


4. Put parts of the connector on the cable (6) and connect wires to the connector. First connect power wires (L,N, Earth) and after that data wires (D+, D-, OV). Avoid excessive torsion of data wires!

#### CE version

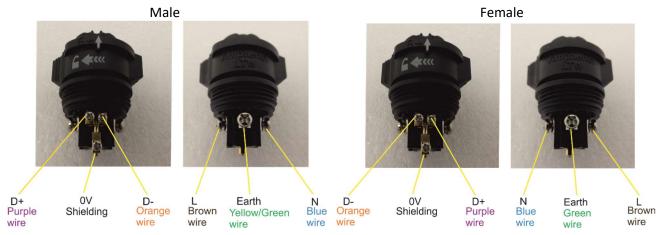

#### **US** version

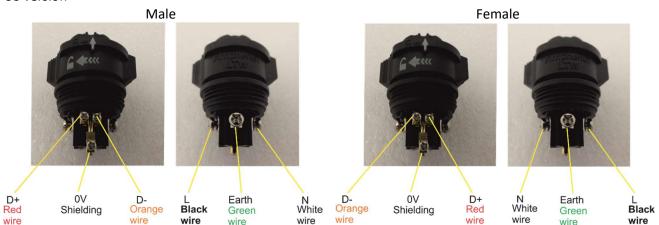

5. After connecting wires to the connector, tighten the three data wires (D+,D-, 0V) by means of the cable binder (7).



6. Screw the clamp ring (3) to the connector (1), insert the seal (4) to the clamp ring (3) and tighten the sealing nut (5) enough. During the steps DO NOT TWIST the cable (6).

7. Use the same procedure to assemble the connector on the second end of the cable.

#### **IMPORTANT**

Do not bend the cable near to the connector, minimum distance for bending is 50mm.



# 4. Technical specifications

#### **Power supply**

- Electronic auto-ranging
- Input voltage: 120 277V AC, 50/60 Hz
- Power consumption:

Eminere 2: 45W Eminere 3: 65W Eminere 4: 85W

• Inrush current:

Eminere 2: <70A/250μs Eminere 3: <100A/200μs Eminere 4: <100A/200μs

#### Optic

• Light source:

Eminere 2: 24 x high power LEDs Eminere 3: 36 x high power LEDs Eminere 4: 48 x high power LEDs

- Colour variants: RGBW, RGBA, single colour
- Beam Angle:

Symetrical: 9°, 15°, 30°, 50°, 65°, 100°

Bi-symetrical: 10° x 30°, 30° x 10°, 10° x 60°, 60° x 10°, 35° x 70°, 70° x 35°, 15° x 90°, 90° x 15°

Wallwasher, Wide Wallwasher

Projected Lumen Maintenance: L90B10 >90.000 hrs, Ta = 25°C / 77°F

#### Wireless DMX/RDM module RW 001

- Supported protocols: full RDM support, CRMX, W-DMX<sup>TM</sup>G2, G3,G4 and G4S
- Operational frequency range: 2402-2480 MHz
- Output power: 100 mW
- Receiver sensitivity (0.1% BER): -93 dBm
- Crystal Clock Frequency: 16.0 MHz
- Contains FCC ID: 2A6PL-DMXRDMRW001
- Contains IC: 29573-DMXRDMRW001

#### Mounting method

- Via two L-shape brackets
- LED module "tilt" adjustment range: -95°/+95°

#### Sizes

- Eminere 2 (600mm / 2ft)
- Eminere 3 (900mm / 3ft)
- Eminere 4 (1200mm / 4ft)

#### Housing

- Aluminium extruded body with die-casted end caps
- Tempered glass

#### **Cooling system**

• Convection

#### Total heat dissipation

• Eminere 2: 130 BTU/h (calculated)

• Eminere 3: 177 BTU/h (calculated)

• Eminere 4: 228 BTU/h (calculated

#### **Protection factor**

- CE: IP 67
- US: Suitable for wet location

#### **Impact rating**

• CE: IK06

#### Operating ambient temperature range

• -20°C /+40°C (-4°F /+104°F)

#### **Operating temperature**

• +67°C @ Ambient +40°C (+153°F @ Ambient +104°F)


#### Connection

- Input: panel connector Amphenol ABAB-DMQ06000021-IN (P/N13052952)
- Output: panel connector Amphenol ABAB-DAQ06000021 (P/N13052953) + water-tight cap


# Weight

- •Eminere 2: 4 kg (8.82 lbs)
- •Eminere 3: 6.02 kg (13.27 lbs)
- •Eminere 4: 7.7 kg (17 lbs)

#### **Dimensions** (All dimensions in mm [inch])

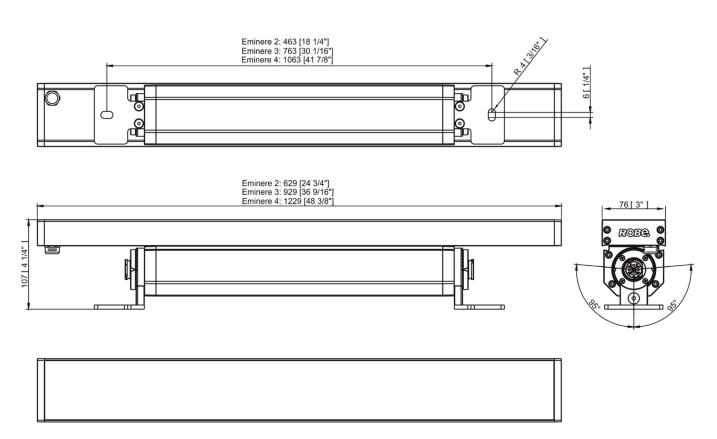

#### • Booster box

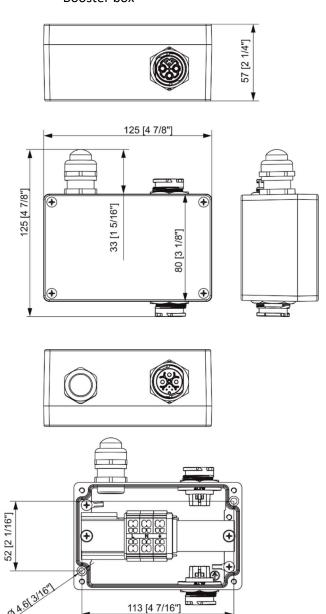

# **Included items**

- 1 x Eminere
- 1 x User manual

#### **Optional accessories**

#### Jumper Cables FF/FM:

Jumper Cable FF/FM 0,25m (P/N 13053052)

Jumper Cable FF/FM 0,5m (P/N 13053053)

Jumper Cable FF/FM 1m (P/N 13053054)

Jumper Cable FF/FM 2m (P/N 13053055)

Jumper Cable FF/FM 3m (P/N 13053056)

Jumper Cable FF/FM 5m (P/N 13053057)

Jumper Cable FF/FM 10m (P/N 13053058)

Waterproof Cover Cap FM ZAHB-0006 (P/N 17031173)

Field Installable Connector FF (P/N 13053003)

Field Installable Connector FM (P/N 13053004)

Cable Cover for Eminere 2 RAL9011 (P/N 10980485)

Cable Cover for Eminere 3 RAL9011 (P/N 10980486)

Cable Cover for Eminere 4 RAL9011 (P/N 10980487)

Shield for Eminere 2 RAL9011 (P/N 10980489)

Shield for Eminere 3 RAL9011 (P/N 10980490)

Shield for Eminere 4 RAL9011 (P/N 10980491)

Mounting Brackets for Eminere 100mm, 2pcs RAL9011 (P/N 10980493)

Mounting Brackets for Eminere 200mm, 2pcs RAL9006 (P/N 10980529)

Mounting Brackets for Eminere 200mm, 2pcs RAL9011 (P/N 10980494)

Mounting Brackets for Eminere 300mm, 2pcs RAL9006 (P/N 10980576)

Mounting Brackets for Eminere 300mm, 2pcs RAL9011 (P/N 10980495)

Mounting Brackets for Eminere 50mm, 2pcs RAL9011 (P/N 10980525)

# 5. Cleaning and maintenance

#### DANGER!

Disconnect from the mains before starting any maintenance or cleaning work

Rinse off loose dirt with low pressure water spray. Wash the housing with a soft brush or sponge and a mild, non-abrasive washing detergent. Rinse it.

Maintenance and service operations are only to be carried out by a qualified person.

Should you need any spare parts, please use ROBE OEM parts.

### 5.1 Disposing of the product

To preserve the environment please dispose or recycle this product at the end of its life according to the local regulations and codes.

# 6. ChangeLog

This section summarizes changes in the user manual.

Version of manual	Date of issue	Description of changes
1.1	07/09/2021	Option Wireless DMX to wired DMX removed
1.2	05/10/2021	New DMX chart
1.3	13/10/2021	Technical specifications changed
1.4	26/11/2021	Optional accessories changed
1.5	20/12/2021	Jumper cable mounting added
1.6	06/01/2022	Jumper cable mounting chaged
1.7	12/01/2022	Jumper cable mounting more specified
1.8	23/02/2022	Sealing circle added to jumper cable mounting
1.9	19/05/2022	QR code added
2.0	12/01/2023	DMX chart ver. 3.1
2.1	10/02/2023	DMX chart ver. 3.2
2.2	20/03/2023	Notes about EMC added

			C	МХ	prote	ocol f	or: Er	minere 1/2/3/4; Eminere Side 1/2/3/4;	
				E	Emin			nd 2/4; Eminere Remote 1/2/3/4; 2/4; UVinere Remote 1/2/4	
Vorci	n. 2 2	(22 m	odos i	n tota	I) soft			3.0 and higher	
VEISIG	JII. J.Z	-			in all	wale	76131011	•	
1	2	3	4	5	6	7	8-10	Mode 1: RGBW(A)-8bit, Mode 2: RGB 8-bit, Mode 3: full RGBW(A)	
			-		ļ		_	Mode 4: White-full control, Mode 5: Reduced RGBW(A)	
4	3	12	3	6	8	15	Reserved	Mode 6- Reduced RGBW(A)+white control	
								Mode 7- full RGBW(A)+virtual colour wheel  RGBW(A) / RGB modes	
		Mod	e/char	nels			DMX		Type of
1	2	3	4	5	6	7	Value	Function	control
-	_	-	-	-	-	1		Special functions	
							0	No function	step
								To activate following functions , stop in DMX value for at least 3 sec.	
							1-2	Save current DMX values to fixture as initial DMX values.	step
							3-4	Show saved initial DMX values	step
							5-6	Run factory demo sequences at switching fixture on (without DMX)	step
							7-255	Reserved	
1	1	1	-	1	1	2		Red	
							0-255	Red LEDs saturation control (0-100%)	proportional
-	-	2	-	-	-	3		Red Fine	
							0-255	Red LEDs saturation control fine	proportional
2	2	3	-	2	2	4		Green	
							0-255	Green LEDs saturation control (0-100%)	proportional
-	-	4	-	-	-	5		Green Fine	
							0-255	Green LEDs saturation control fine	proportional
3	3	5	-	3	3	6		Blue	
							0-255	Blue LEDs saturation control (0-100%)	proportional
	_	6	-	_	-	7		Blue Fine	
							0-255	Blue LEDs saturation control fine	proportional
4	-	7	-	4	4	8		White (Amber)	
							0-255	White LEDs saturation control (0-100%)	proportional
-	-	8	-	-	-	9		White (Amber) Fine	
							0-255	White LEDs saturation control fine	proportional
-	-	9	1	<u> </u>	5	10		Green correction	
							0	Uncorrected white	step
							1-127	Minus green> uncorrected white	proportional
							128	Uncorrected white (128=default)	step
							129-255	Uncorrected white> Plus green	proportional
-	-	10	2	-	6	11		Colour temperature correction (CTC)	
							0	No function	step
							1-10	Tungsten dimming 2700 K	step
							11-20	Tungsten dimming 3200 K	step
							21-255	Colour temperature changing from 1800 K> 6500 K (21-1800K, 66-2700K, 91-3200K,141-4200K, 211-5600K, 255-	proportional
_	_	_	_	_	-	12			
							0	No function	step
<u> </u>					<u> </u>		L	1	I

# DMX protocol

Mode/channels						DMX	MX Function		
1	2	3	4	5	6	7	Value	runction	control
							1-2	White 1800 K	step
							3-4	White 2700 K	step
							5-6	White 3200 K	step
							7-8	White 4200 K	step
							9-10	White 5600 K	step
							11-12	White 6500 K	step
							13	Blue (Blue=full, Red+Green+White/Amber=0)	step
							14-23	Red=0, Green->up,Blue =full, White/Amber=0	proportional
							24	Cyan (Red=0, Green=full, Blue =full, White/Amber=0)	step
							25-34	Red=0, Green=full, Blue->down, White/Amber=0	proportional
							35	Green (Red=0, Green=full, Blue =0, White/Amber=0)	step
							36-45	Red->up, Green=full, Blue=0, White/Amber=0	proportional
							46	Yellow (Red=full, Green=full, Blue=0, White/Amber=0)	step
							47-56	Red=full, Green->down, Blue=0, White/Amber=0	proportional
							57	Red(Red=full, Green=0, Blue=0, White/Amber=0)	step
							58-67	Red=full, Green=0, Blue->up, White/Amber=0	proportional
							68	Magenta (Red=full, Green=0, Blue=full, White/Amber=0)	step
							69-78	Red -> down, Green=0, Blue=full, White/Amber=0	proportional
							79	Blue (Red=0, Green=0, Blue=full, White/Amber=0)	step
								Transition effects	
							80-87	Rainbow effect (with fade time) from slow-> fast	proportional
							88-95	Rainbow effect (without fade time) from slow-> fast	proportional
							96-103	Full dynamic white (1800K->6500K->1800K) (with fade time) from	proportional
								slow-> fast	
							104-111	Full dynamic white (1800K->6500K->1800K) (without fade time)	proportional
							112-119	from slow-> fast Dynamic warm white (1800K-3000K-1800K) (with fade time) from	proportional
								slow-> fast	proportional
							120-127	Dynamic warm white (1800K-3000K-1800K) (without fade time)	proportional
							120 125	from slow-> fast Rainbow effect + full dynamic white (with fade time) from slow->	
							128-135	fast	proportional
							136-143	Rainbow effect + full dynamic white (without fade time) from	proportional
								slow-> fast	
							145-151	Blue/Green effect (with fade time) from slow-> fast	proportional
								Blue/Green effect (without fade time) from slow-> fast	proportional
								Red/Blue effect (with fade time) from slow-> fast	proportional
							168-175	Red/Blue effect (without fade time) from slow-> fast	proportional
							176-183	Green/Red effect (with fade time) from slow-> fast	proportional
							184-191	Green/Red effect (without fade time) from slow-> fast	proportional
							192-199	Blue/4000K effect (with fade time) from slow-> fast	proportional
							200-207	Blue/4000K effect (without fade time) from slow-> fast	proportional
								Green/4000K effect (with fade time) from slow-> fast	proportional
								Green/4000K effect (without fade time) from slow-> fast	proportional
							224-231	Red/4000K effect (with fade time) from slow-> fast	proportional
							232-239	Red/4000K effect (without fade time) from slow-> fast	proportional
							240-255	Reserved	
						13		Shutter/Strobe	
							0-31	Shutter closed	step
							32-63	Shutter open	step

# DMX protocol

		Mod	e/char	nels			DMX	Function	Type of
1	2	3	4	5	6	7	Value	Function	control
							64-95	Strobe-effect from slow to fast	proportional
							96-127	Shutter open	step
							128-143	Opening pulse in sequences from slow to fast	proportional
							144-159	Closing pulse in sequences from fast to slow	proportional
							160-191	Shutter open	step
							192-223	Random strobe-effect from slow to fast	proportional
							224-255	Shutter open	step
-	-	11	3	5	7	14		Dimmer	
							0-255	Light intensity coarse (0-100%)	proportional
-	-	12	-	6	8	15		Dimmer Fine	
							0-255	Light intensity fine	proportional
Соруі	right @	2022-	2023	Robe I	Lightir	g s.r.o	All rig	ghts reserved	
All Sp	ecifica	itions s	ubject	to ch	ange v	vithou	t notice		

		Emir	nere Ingi	round 2/4; Eminere Remote 1/2/3/4;	
			UVine	ere 2/4; UVinere Remote 1/2/4	
/ersion: 3	.2 (23 mod	es in total)			
	Mode/Cha	nnels in all		Mode 11: TW – White selection + Dimmer, Mode 12: TW – WW + CW	
11	12	13	14-16	Mode 13: PW - Dimmer	
3	4	2	Reserved	Mode 13 is suitable for UVinere and UVinere Remote	
				TW and PW modes	
11	Mode/channels         DMX           11         12         13         Value			Function	Type of control
1		_	value	White colour selection	Control
			0 - 255	White from 2700 K - 6500 K	proportiona
_	1	-	0 100	Warm White	p. oper. com
			0 - 255	Warm White LEDs saturation control (0-100%)	proportiona
-	2	-		Cool White	T
			0 - 255	Cool White LEDs saturation control (0-100%)	proportiona
2	3	1		Dimmer	
			0 - 255	Light intensity coarse (0 - 100%)	proportiona
3	4	2		Dimmer Fine	
			0 - 255	Light intensity fine	proportiona
opyright	© 2022-20	23 Robe Li	ghting s.r.c	o All rights reserved	

# DMX protocol for: Eminere 1/2/3/4; Eminere Side 1/2/3/4; Eminere Inground 2/4; Eminere Remote 1/2/3/4;

	Mode	/Channels	in all	1	Mode 16: RGBW(A) pixels, Mode 17 RGB pixels, Mode 18: TW pixels,		
17	18	19	20	21-23	Mode 19- PW dimmer pixels	i vv pixcis,	
16	12	8	8	Reserved	infoue 15- PW diffiller pixels		
10	12	0	0	Reserved	Pixel modes		
Mode/channels				DMX	Fixel Hiodes	Туре о	
17	18	19	20	Value	Function	contro	
1	1				Red 1 -Eminere 1/2/3/4		
	_			0 - 255	Red LEDs saturation control (0-100%)	proportio	
2	2	-	-		Green 1-Eminere 1/2/3/4	p sps ss	
	_			0 - 255	Green LEDs saturation control (0-100%)	proportio	
3	3	-	-		Blue 1-Eminere 1/2/3/4		
				0 - 255	Blue LEDs saturation control (0-100%)	proportio	
4	-	-	-		White (Amber) 1-Eminere 1/2/3/4		
				0 - 255	White LEDs saturation control (0-100%)	proportio	
5	4	-	-		Red 2 -Eminere 2/3/4		
				0 - 255	Red LEDs saturation control (0-100%)	proportio	
6	5	-	_		Green 2-Eminere 2/3/4	İ	
				0 - 255	Green LEDs saturation control (0-100%)	proportio	
7	6	-	-		Blue 2-Eminere 2/3/4		
				0 - 255	Red LEDs saturation control (0-100%)	proportio	
8	-	-	-		White (Amber) 2-Eminere 2/3/4		
				0 - 255	White LEDs saturation control (0-100%)	proportio	
9	7	-	-		Red 3-Eminere 3/4		
				0 - 255	Red LEDs saturation control (0-100%)	proportio	
10	8	-	-		Green 3-Eminere 3/4		
				0 - 255	Green LEDs saturation control (0-100%)	proportio	
11	9	-	-		Blue 3-Eminere 3/4		
				0 - 255	Blue LEDs saturation control (0-100%)	proportio	
12	-	-	-		White (Amber) 3-Eminere 3/4		
				0 - 255	White LEDs saturation control (0-100%)	proportio	
13	10	-	-		Red 4-Eminere 4		
				0 - 255	Red LEDs saturation control (0-100%)	proportio	
14	11	-	-		Green 4-Eminere 4		
				0 - 255	Green LEDs saturation control (0-100%)	proportio	
15	12	-	-		Blue 4-Eminere 4		
				0 - 255	Blue LEDs saturation control (0-100%)	proportio	
16	-	-	-		White (Amber) 4 -Eminere 4		
				0 - 255	White LEDs saturation control (0-100%)	proportio	
-	-	1	-		Warm White 1 -Eminere 1/2/3/4		
					Warm White LEDs saturation control (0-100%)	proportio	
-	-	2	-		Cool White 1-Eminere 1/2/3/4		
				0 - 255	Cool White LEDs saturation control (0-100%)	proportio	

# DMX protocol

	Mode/channels				Function	Type of
17	18	19	20	Value	Function	control
				0 - 255	Warm White LEDs saturation control (0-100%)	proportion
-	-	4	-		Cool White 2-Eminere 2/3/4	
				0 - 255	Cool White LEDs saturation control (0-100%)	proportion
-	-	5	-		Warm White 3-Eminere 3/4	
				0 - 255	Warm White LEDs saturation control (0-100%)	proportion
-	-	6	-		Cool White 3-Eminere 3/4	
				0 - 255	Cool White LEDs saturation control (0-100%)	proportion
-	-	7	-		Warm White 4 -Eminere 4	
				0 - 255	Warm White LEDs saturation control (0-100%)	proportion
-	-	8	-		Cool White 4 -Eminere 4	
				0 - 255	Cool White LEDs saturation control (0-100%)	proportion
-	-	-	1		Dimmer 1	
				0 - 255	Light intensity coarse (0 - 100%)	proportion
-	-	-	2		Dimmer Fine 1	
				0 - 255	Light intensity fine	proportion
-	-	-	3		Dimmer 2	
				0 - 255	Light intensity coarse (0 - 100%)	proportion
-	-	-	4		Dimmer Fine 2	
				0 - 255	Light intensity fine	proportion
-	-	-	5		Dimmer 3	
				0 - 255	Light intensity coarse (0 - 100%)	proportion
-	-	-	6		Dimmer Fine 3	
				0 - 255	Light intensity fine	proportion
-	-	-	7		Dimmer 4	
				0 - 255	Light intensity coarse (0 - 100%)	proportion
-	-	-	8		Dimmer Fine 4	
				0 - 255	Light intensity fine	proportion
pyright	© 2022-20	23 Robe Li	ighting s.r.	o All righ	ts reserved	
l Specifi	cations sub	ject to cha	nge witho	ut notice		