





QR code for Installations Instructions

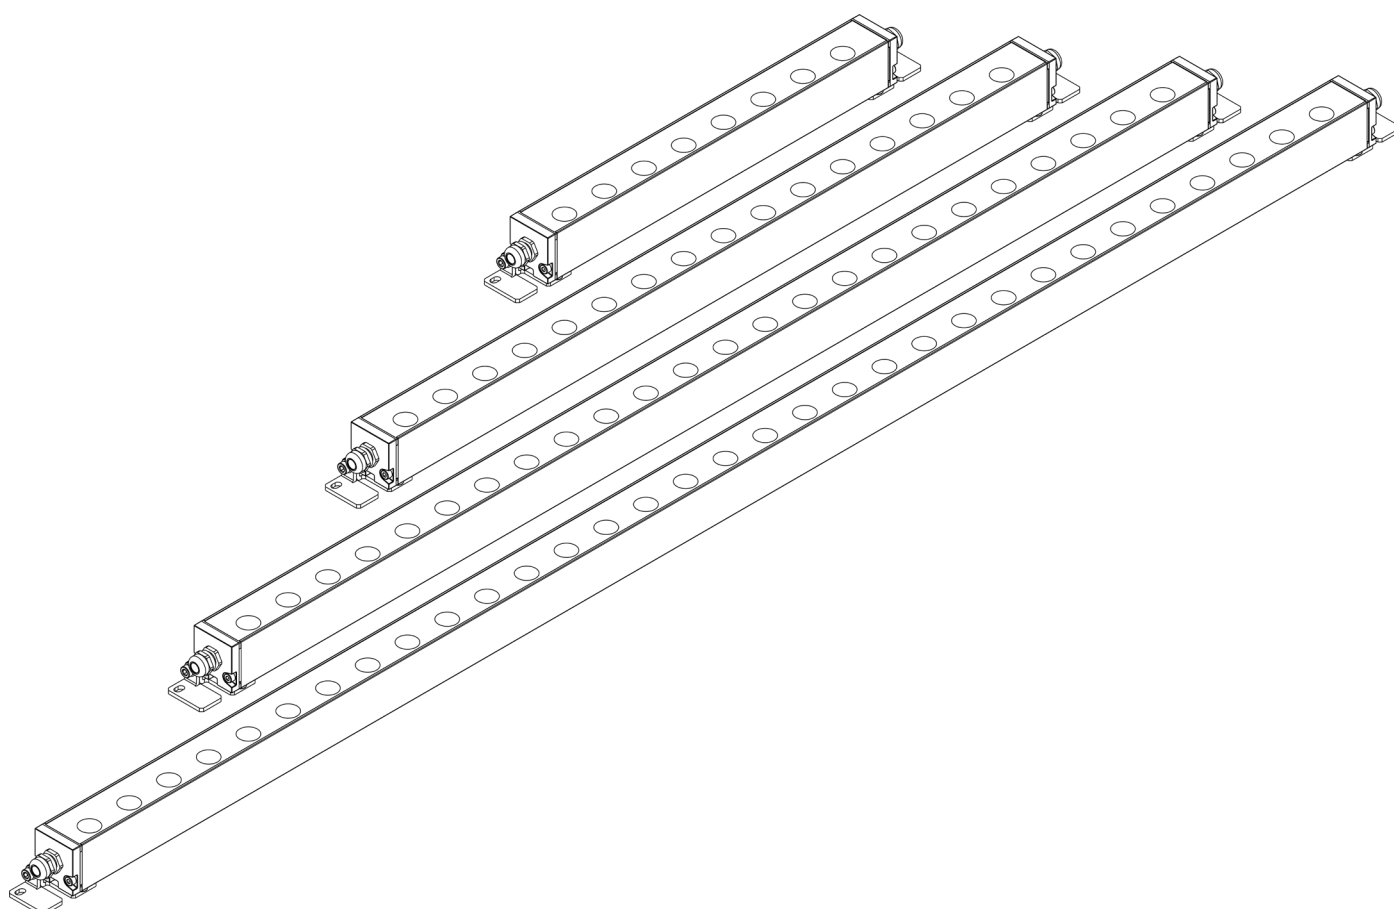


The unit must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.



1A LAMARI SC/MC SIDE VERSION - SPACING

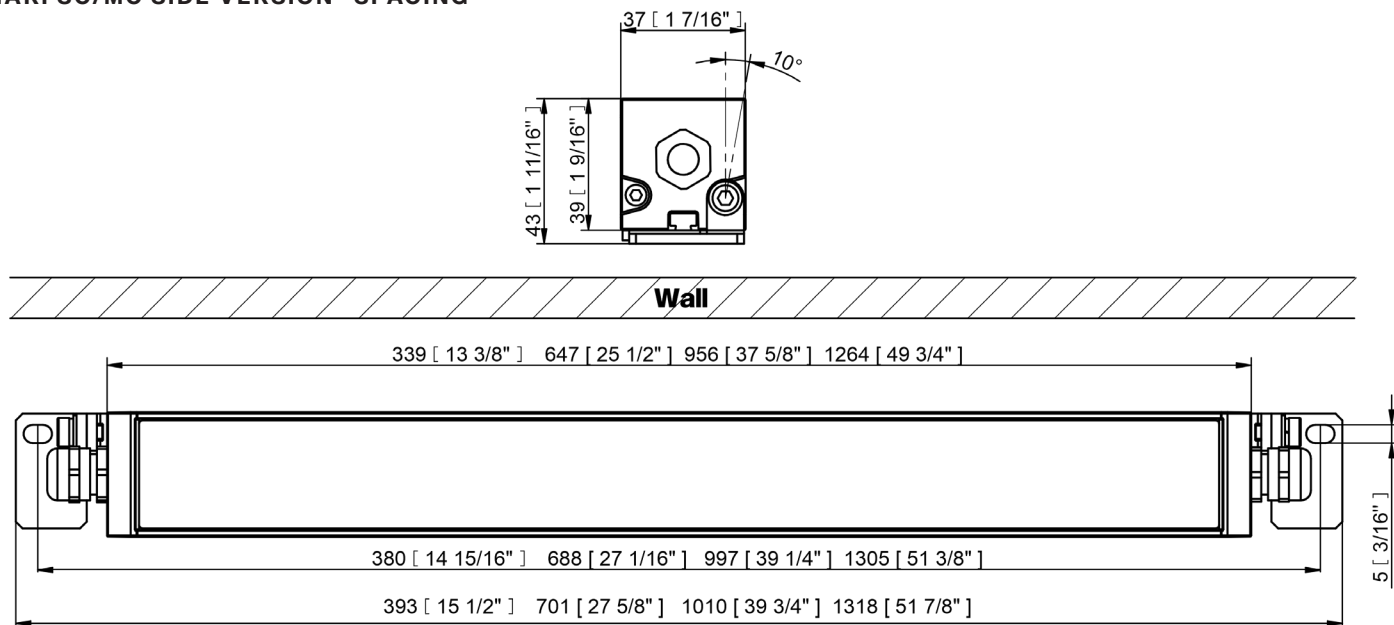

1B LAMARI SC/MC REAR VERSION - SPACING

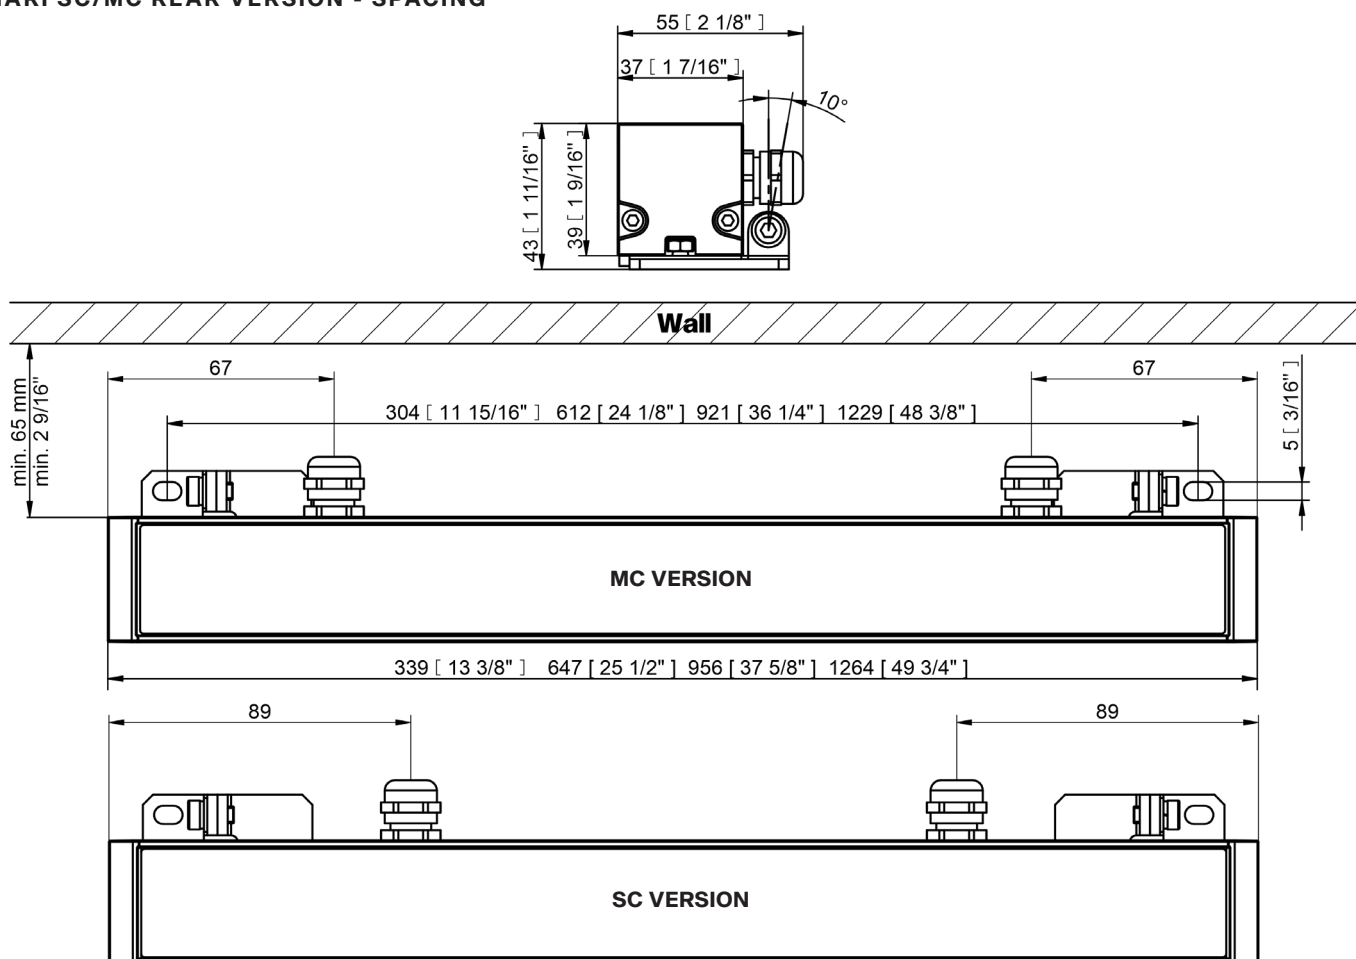

LAMARI CABLE ENTRY OPTIONS


Side IN/OUT version



Side IN version



Rear IN/OUT version

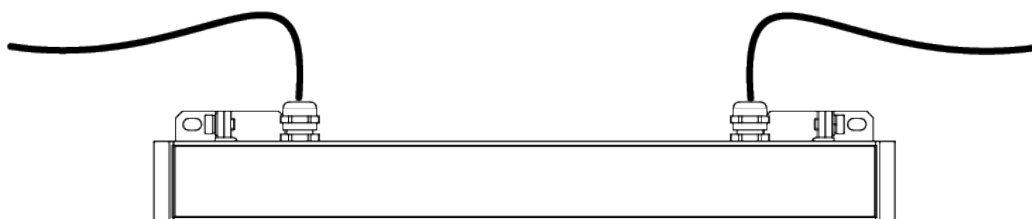

Rear IN version



STEP 2

MOUNTING AND TILTING

1




Use fasteners that are appropriate for use with your mounting surface



The Lamari can be arranged in any orientation on a flat, non-flammable surface by means of two mounting brackets. Two mounting holes can be drilled into the mounting surface according to brackets spacing and size of fasteners, prior to mounting of the fixture.

2

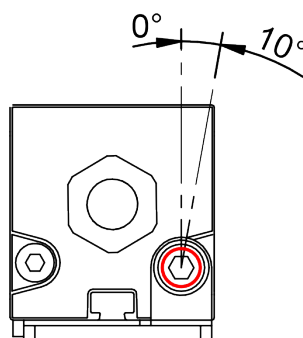


Release locking screw M5x10 on each sides. Angle fixture to desired position and tighten locking screw on each sides.

STEP 3 CONTROL AND CONNECTION OPTIONS

Connection Box Remote 1x Out

- 1) SJTW 5x 14AWG (I3053336), Standard with bare-end, black, or
On request Cable SJTW 5x 14AWG (I3053697), with bare-end, white
- 2) Field Installable Connector FF DC-05 (I3053971)
- 3) Connection Box Remote 1x Out (AWG14-to-AWG20), Cable (5x AWG20) 0,1m, with Connector FF
- 4) T-connector FMF, (I3053941)
- 5) Cable (5x AWG20) 0,5 m, with Connector MM
- 6) Cable (5x AWG20) 0,1 m, with Connector FF


Note: The last unmated connector must be fitted with an Waterproof Cap to protect the IP rating.

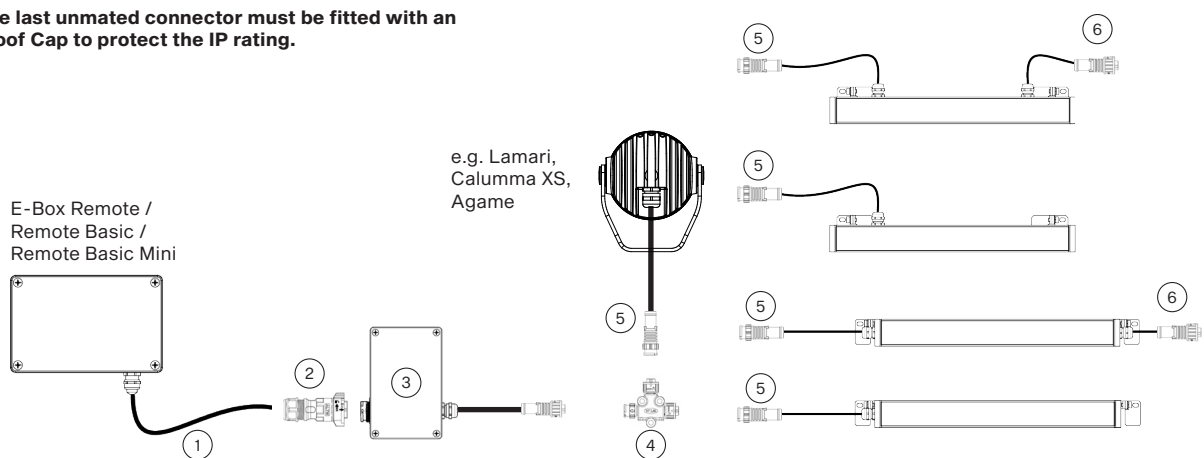

Connection Box Remote 2x Out


- 1) SJTW 5x 14AWG (I3053336), Standard with bare-end, black, or
On request Cable SJTW 5x 14AWG (I3053697), with bare-end, white
- 2) Field Installable Connector FF DC-05 (I3053971)
- 3) Connection Box Remote 2x Out (AWG14-to-AWG14&AWG20), Cable (5x AWG20) 0,1m, with Connector FF
- 4) Cable (5x AWG20) 0,1m, with Connector FF
- 5) Field Installable Connector FM DC-05 (I3053973)
- 6) Cable (5x AWG20) 0,5m, with Connector MM

Note: The last unmated connector must be fitted with an Waterproof Cap to protect the IP rating.

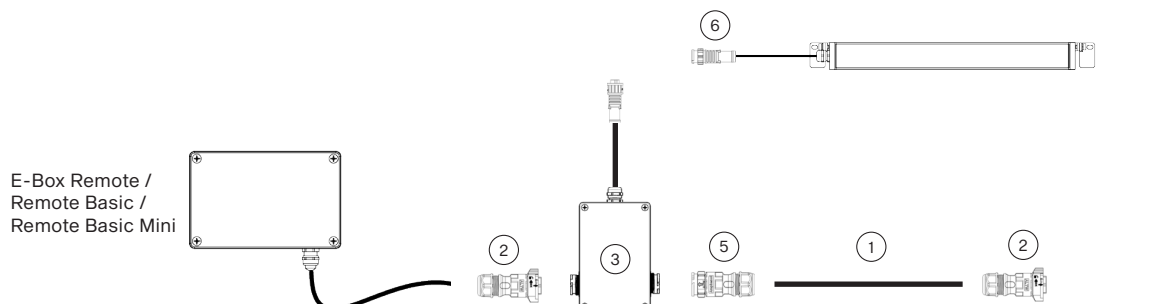


STEP 4
INSTALLATION OF ACCESORIES (OPTICAL DEMO SET)

1

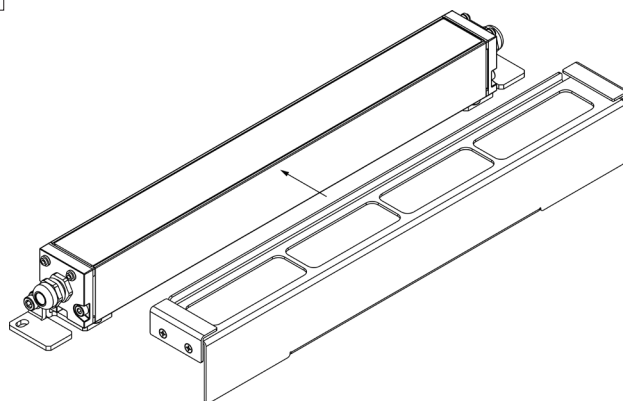


Slide the Optical Demo Set on the Lamari.

2

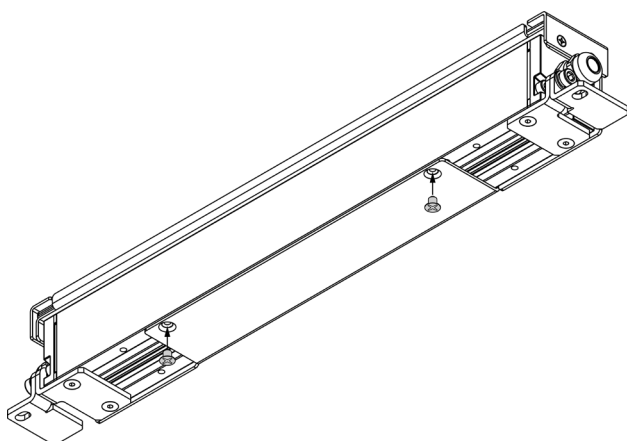

Fasten the accessories Optical Demo Set to the luminaire by the 2 packed screws on the bottom side.

3

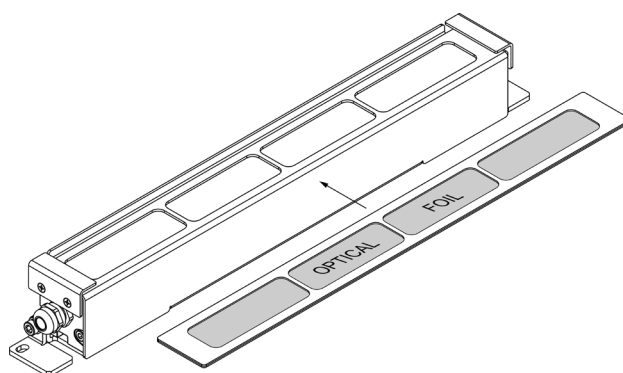

Insert the optical foil between the holders and slide it into the Optical Demo set.