




QR code for Installations Instructions

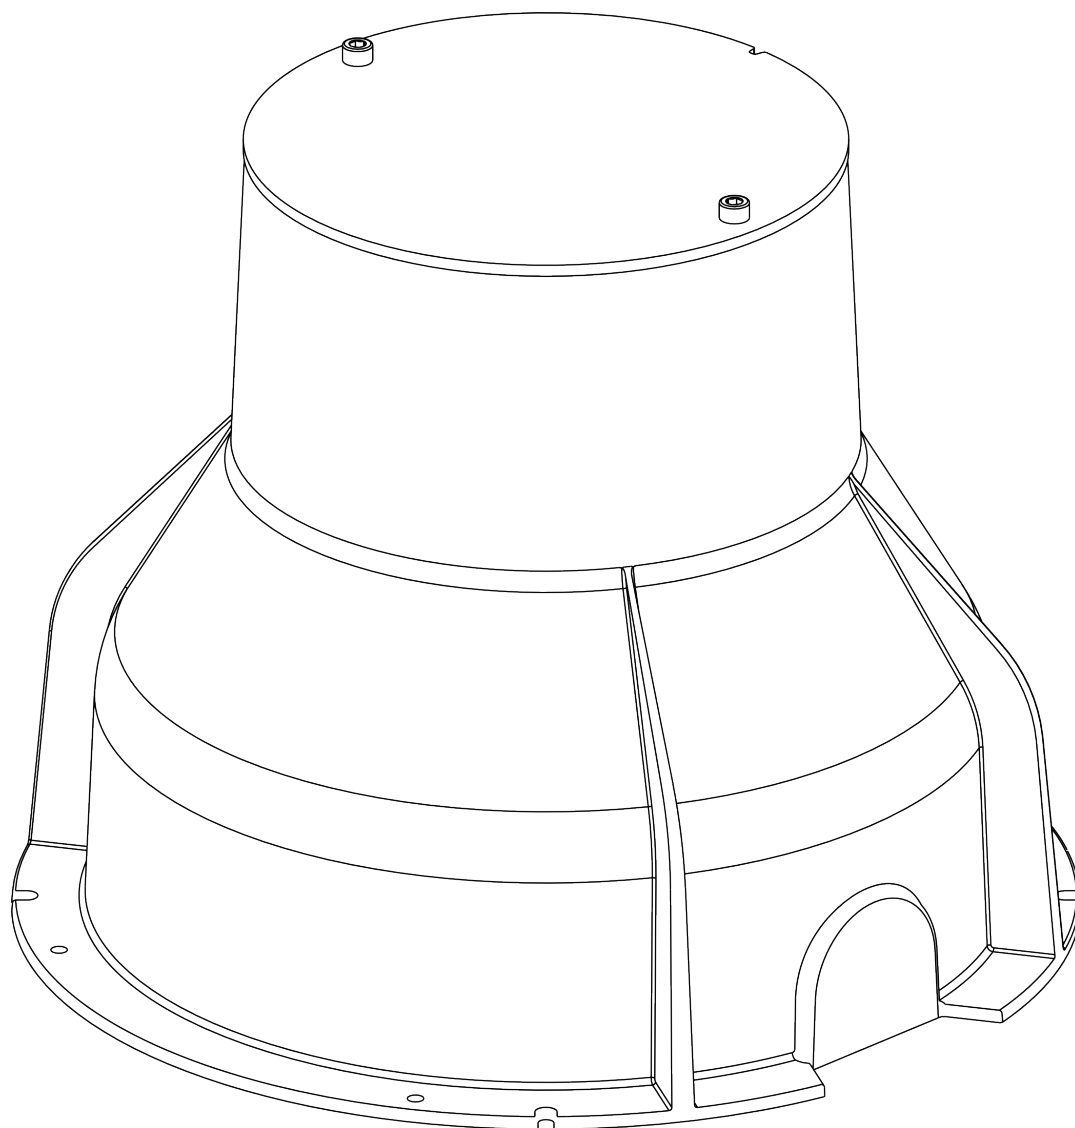


The unit must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.






TRIM OPTIONS

Bevel Edge Square



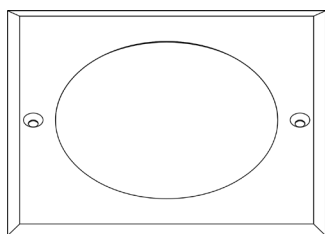


Bevel Edge Round

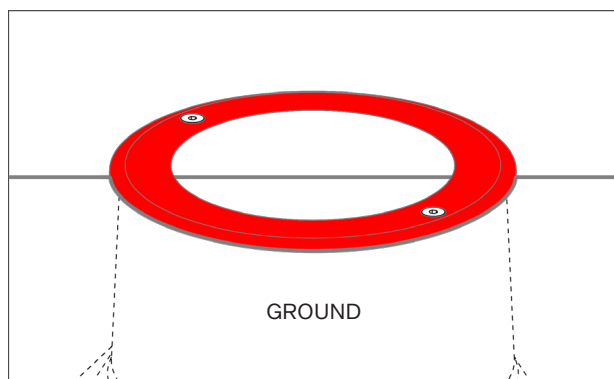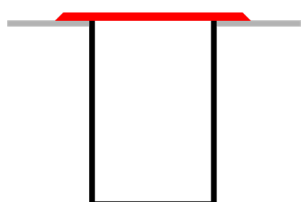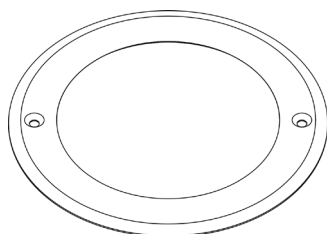

Bevel Edge Trim protrudes above the surface. Trim height is 4mm.

Flush Round

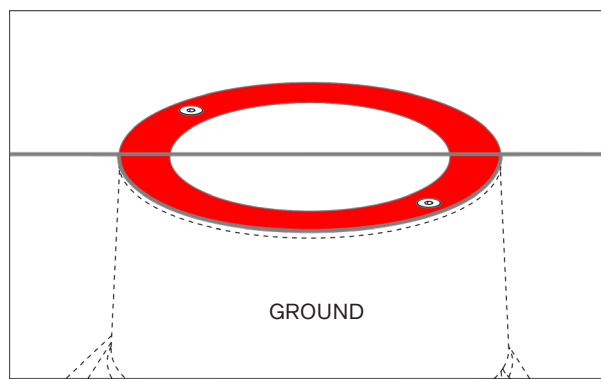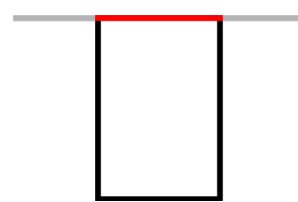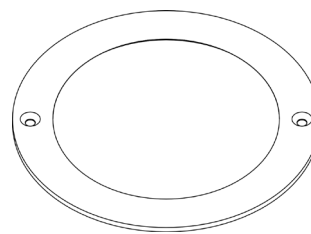


Flush Trim is aligned with the surrounding surface. Trim height is 4mm.

STEP 1


MOUNTING HOLE PREPARATION

SOFT GROUND

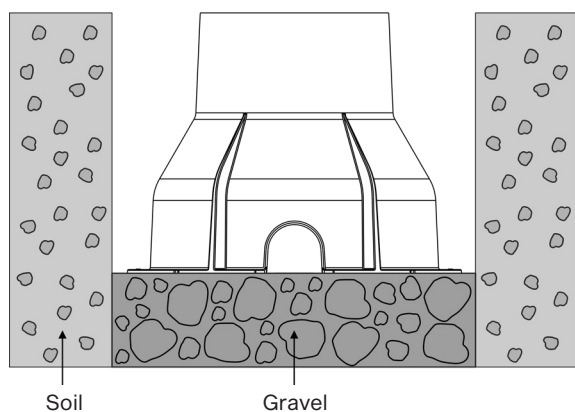

Prepare mounting hole as illustrated in a picture. Soft ground mounting hole (Minimum depth of gravel drainage is 300mm)


HARD GROUND

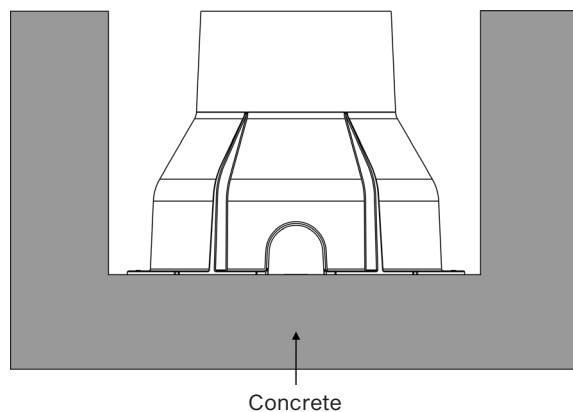

Prepare mounting hole as illustrated in a picture. Hard ground mounting hole.


STEP 2 MOUNTING SLEEVE INSTALLATION

1

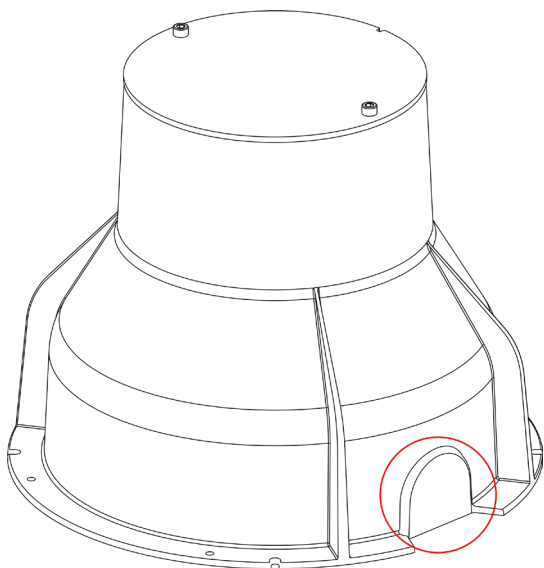


Prepare holes on each side of the sleeve according to the size of the conduit.

2

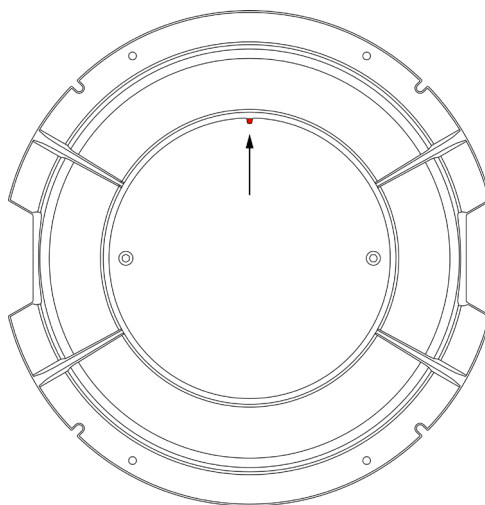

Turn the sleeve in the desired lighting direction, according to the mark.


3

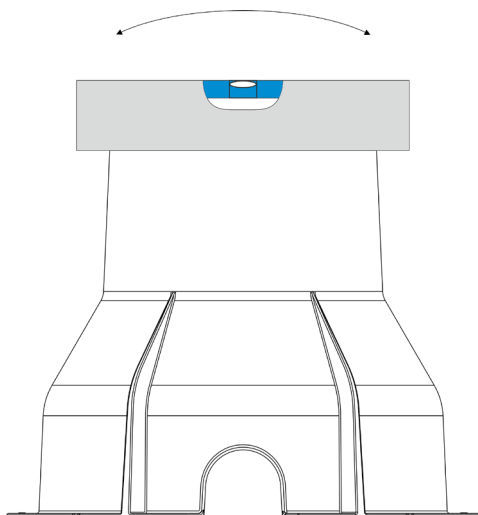

Insert the Mounting Sleeve into the mounting hole and level it using spirit level.

4


 Use fasteners that are appropriate for use with your mounting surface 

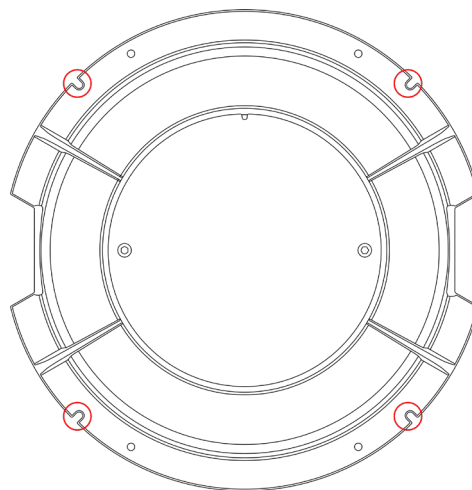

Fasten the Mounting Sleeve to the surface with four suitable fasteners via four holes with diameter of 5,4mm (highlighted in a picture).


5

! The power/data cable to and from the mounting sleeve must be placed in a conduit **!**

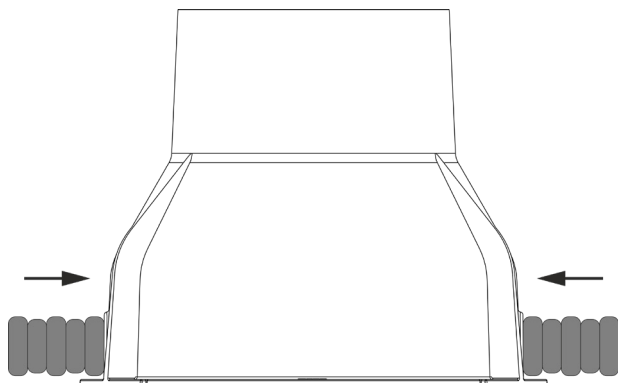


Connect the conduit to the sleeve.

6

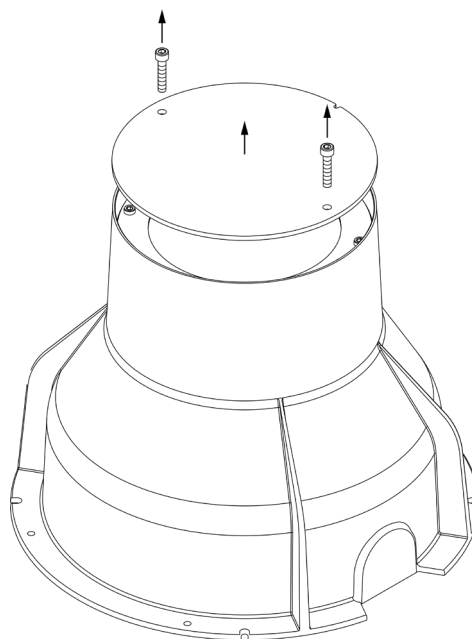


Unscrew two screws and remove the Temporary Cover from Mounting Sleeve.

7

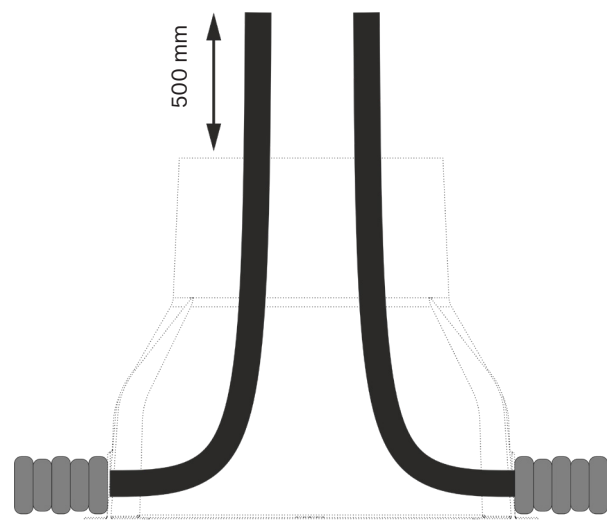

Pull the cables through the conduit into the Sleeve. The recommended cable length is 500mm above the level of the Sleeve.

8

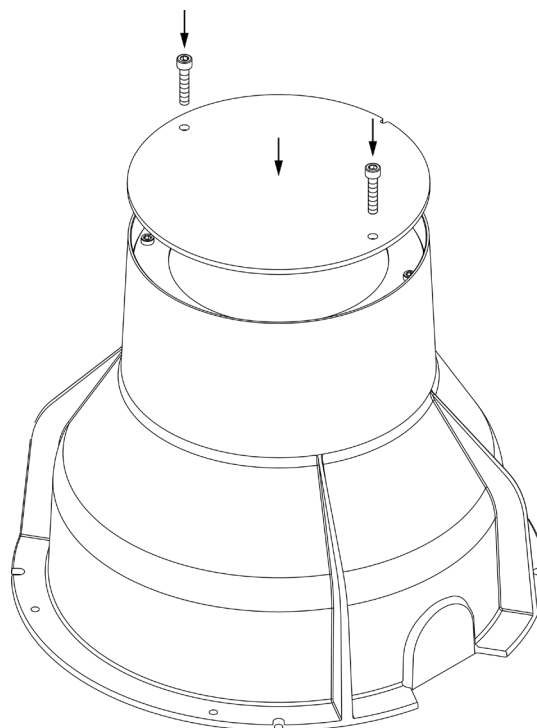


Insert Temporary Cover back into Mounting Sleeve and screw it with two screws.

NOTE:
If you are preparing the Sleeve to install a Luminaire with Bevel Edge Trim, do not place a temporary cover on the Sleeve.

NOTE:


Bevel Edge Trim

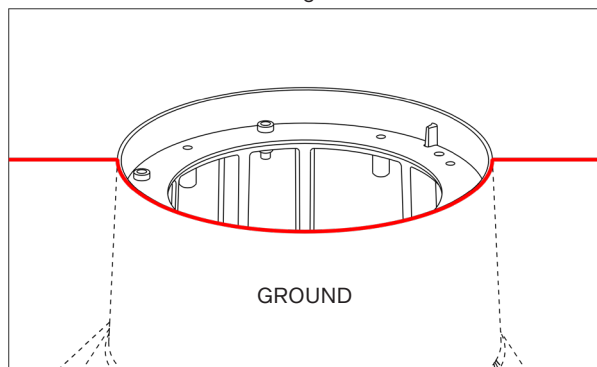

Installation of Luminaire, which will include Bevel Edge Trim, it is necessary to have the temporary plate removed and level the surface to the edge of the Sleeve.

After aligning the surface it is necessary to screw the Temporary cover to the sleeve using two screws.


Flush Trim

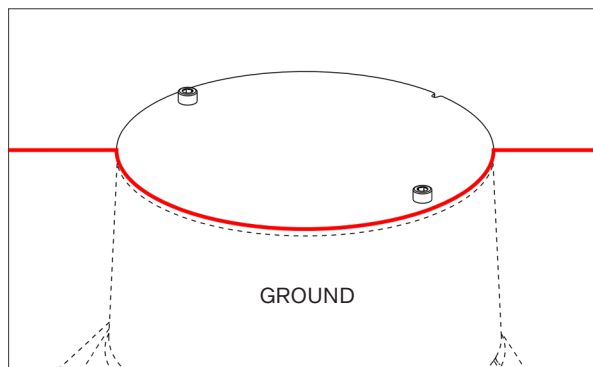

Installation of Luminaire, which will include Flush Trim, it is necessary to level the surface to the edge of the Temporary Cover on the Sleeve.


9

Soft ground

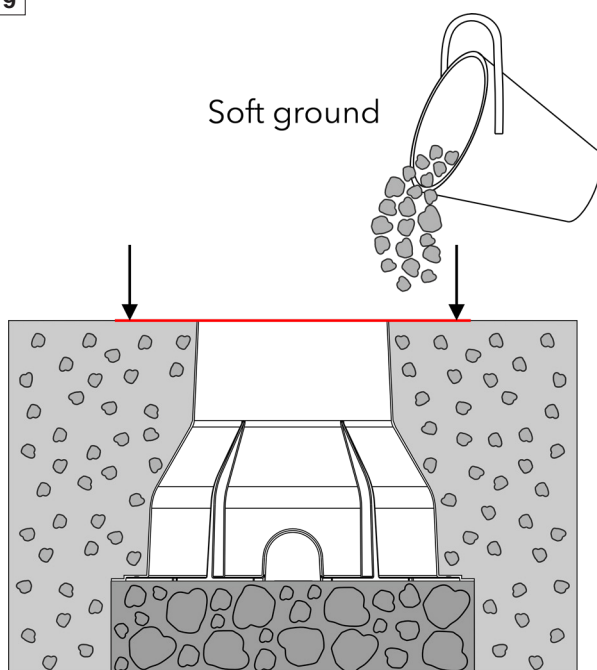

Mounting hole can be filled up with soil or gravel. Filling material should be in same level with the top of Mounting Sleeve or Temporary Cover.

Hard ground

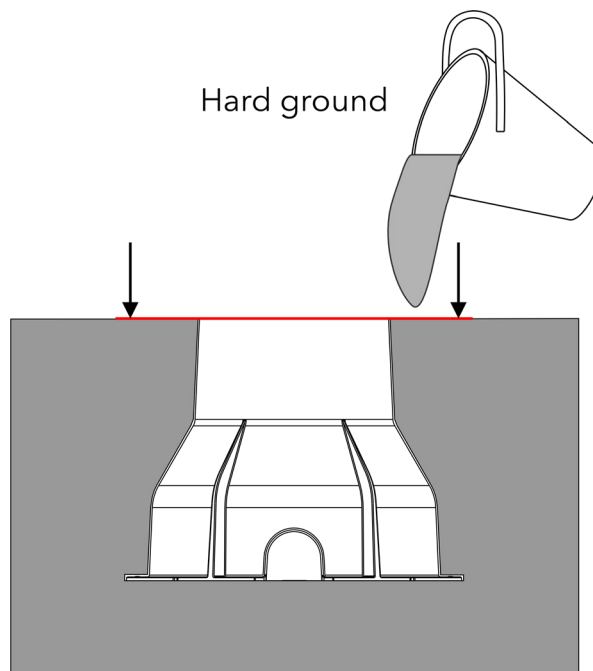

Mounting hole can be filled up with concrete. Filling material should be in same level with the top of Mounting Sleeve or Temporary Cover.