


# Calumma XS MC Calumma XS SC



QR code for user manual

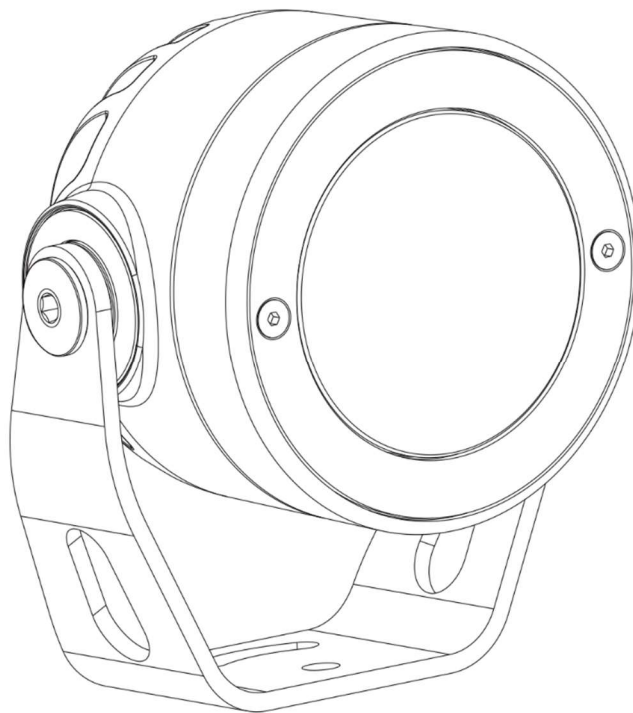

## Table of contents

1. Safety instructions .....	3
2. Fixture exterior view .....	5
3. Control and connection .....	5
4. Installation .....	8
4.1 Mounting the fixture .....	8
4.2 Connection to power .....	9
5. Software update .....	14
6. Technical specifications .....	16
7. Cleaning and maintenance .....	19
7.1 Disposing of the product .....	19
8. ChangeLog .....	20

**FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY  
BEFORE POWERING OR INSTALLING YOUR Calumma !  
Save it for future reference.**

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure safe operation, it is absolutely necessary for the user to follow the safety instructions and warnings written in this manual.

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.

Unauthorized modification will void warranty.

## 1. Safety instructions

**DANGEROUS VOLTAGE CONSTITUTING A RISK OF ELECTRIC SHOCK IS PRESENT WITHIN THIS UNIT!**

Always disconnect the fixture from power before cleaning, servicing or installing.

This fixture should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied, consult your authorized distributor or local power company.

Always disconnect the fixture from AC power before servicing or cleaning.

Make sure the power/data cable is not damaged by sharp edges.

Do not install the unit near an open flame.

Refer servicing to qualified service personnel.

Do not connect this fixture to a dimmer pack.

**LED light emission. Risk of eye injury. Do not look into the beam from a short distance without suitable protective eyewear. Do not look at LEDs with magnifiers or similar optical instruments that may concentrate the light output.**

The fixture was designed for outdoor use. This fixture must not be used for underwater installation.

When choosing the installation spot, please make sure that the fixture is not exposed to extreme heat or dust.

Avoid using the unit in locations subject to possible impacts.

The fixture body never must be covered with cloth or other materials when the fixture is under operation.

Only operate the fixture after having checked that the housing is firmly closed and all screws are tightly fastened.

The fixture becomes hot during operation. Allow the fixture to cool approximately 30 minutes prior to servicing or maintenance.

Please consider that unauthorized modifications on the fixture are forbidden due to safety reasons!

Please use the original packaging if the fixture is to be transported.

If this device will be operated in any way different to the one described in this manual, the product may suffer damages and the warranty becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burns, electric shock etc.

The product (covers and cables) must not be exposed to a high frequency electromagnetic field higher than 3V/m.

Immunity of the equipment is designed according to the standard EN 55035 Electromagnetic compatibility of multimedia equipment - Immunity requirements

Emission of the equipment complies with the standard EN55032 Electromagnetic compatibility of multimedia equipment – Emission Requirements according to class B.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The [Device] wireless operation is safe and complies to RF Exposure requirements.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


***Warning for fixtures with Harsh Environment Finish (HEF):***

***Handle with care!***

***Avoid any damage to the painted surface.***

***Damaging the paint may result in corrosion and loss of warranty.***

## 2. Fixture exterior view

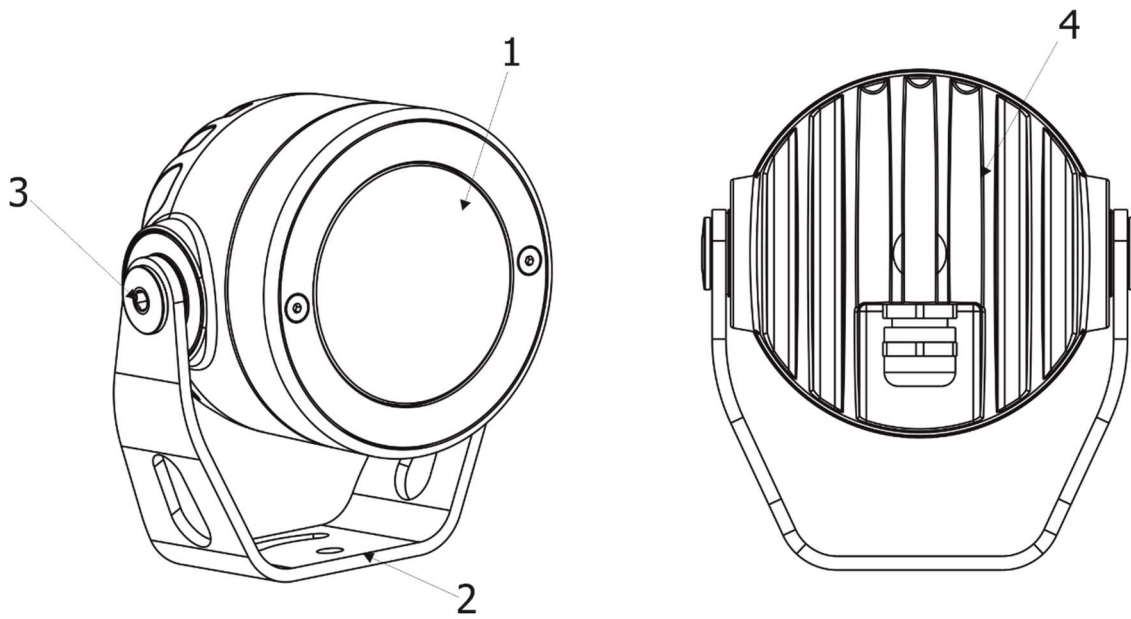

1. Transparent glass cover
2. Mounting yoke
3. Tilt adjusting lock
4. LED module with heat sink


## 3. Control and connection

The Calumma modules should be connected to the E-Box Remote or E-Box Remote basic via junction boxes.




**The E-box Remote has to be switched to the Pass-Through mode.**

### Example of connection with E-box Remote

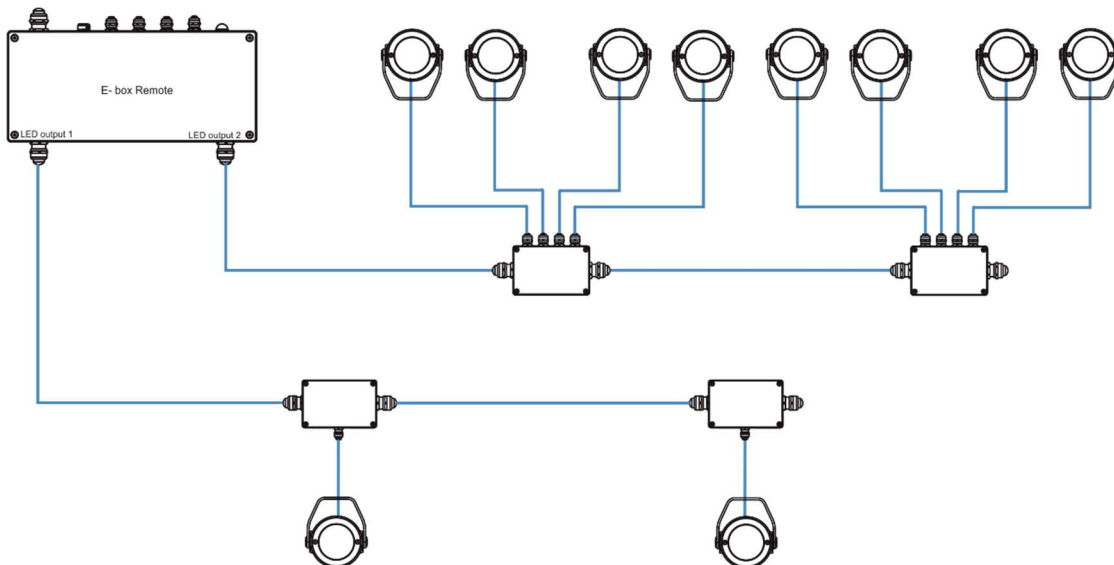


## Calumma XS

### Example of connection with E-box Remote Basic

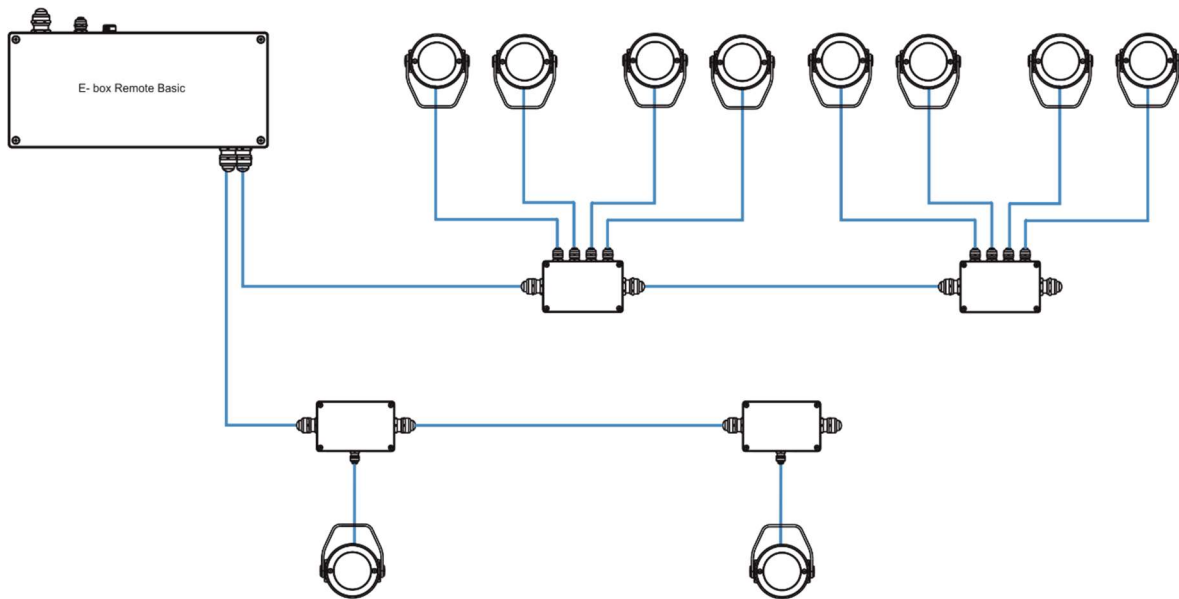

Note. Combination of Calummas XS and E-mineres Remote is also possible.

Example:

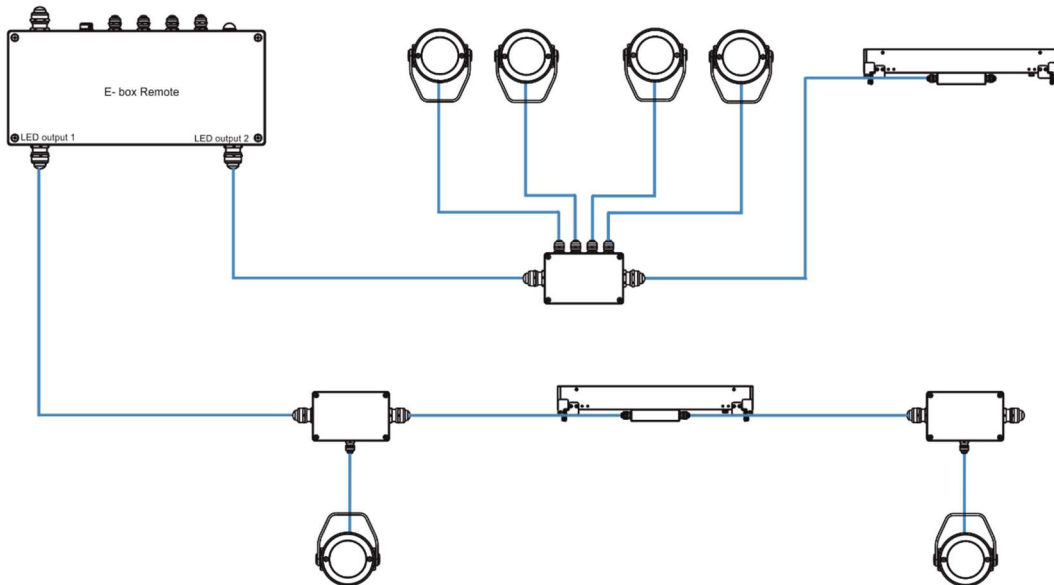

From point of view of driver load (E-box Remote/E-box Remote Basic), max. number of Calummas connected to one E-box Remote/E-box Remote Basic is 40 but Calummas XS have to be operated in the Pass-through mode, it means that max. 32 Calummas XS can be connected in one string.

Max. number of Calummas XS connected to the E-box Remote/E-box Remote Basic also depends on cable length.

#### E-box Remote

Cable length *	Max. number of Calummas XS
50 m	25 per output, 40 in total
100 m	20 per output, 40 in total

# Calumma XS

## E-box Remote Basic


Cable length *	Max. number of Calummas XS
50 m	25
100 m	20

\* Cable length is a total cable length between one output of the E-box Remote (E-box Remote Basic) and last connected Calumma XS.

Example:

Total cable length(output 1)=L1+L2+L3+L4


Total cable length(output 2)=L5+L6+L7+L8+L9

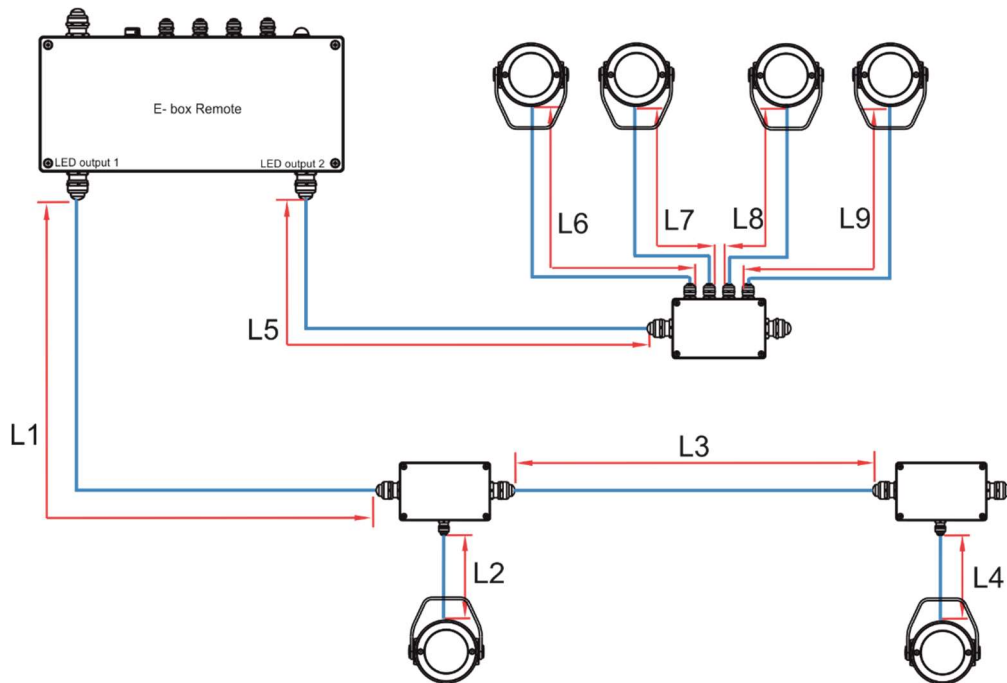

## 4. Installation

### 4.1 Mounting the fixture

The Calumma can be fastened in any orientation on a flat, non-flammable surface by means of mounting yoke (2).

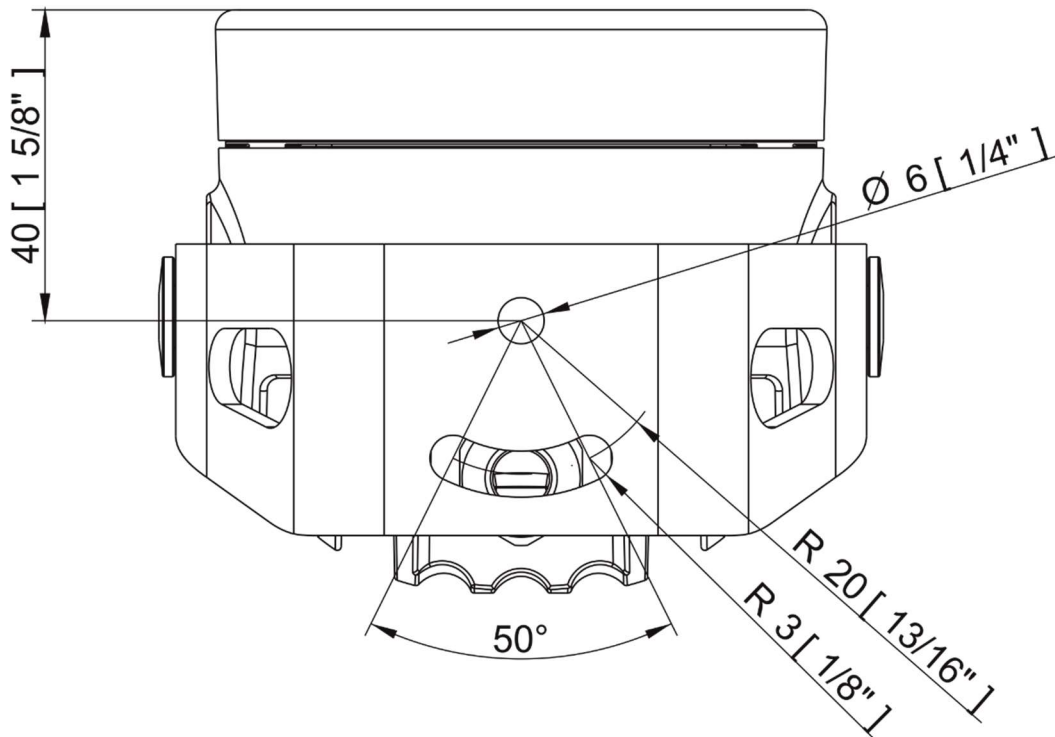

The LED module (4) can be tilted  $+180^\circ/-180^\circ$ . Use an Allen key 2.5 for adjusting a LED module position.

***Ensure that the structure to which you are attaching the fixture is secure.***




## 4.2 Connection to power


**The unit must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.**

### Junction box installation

#### Junction box with one output

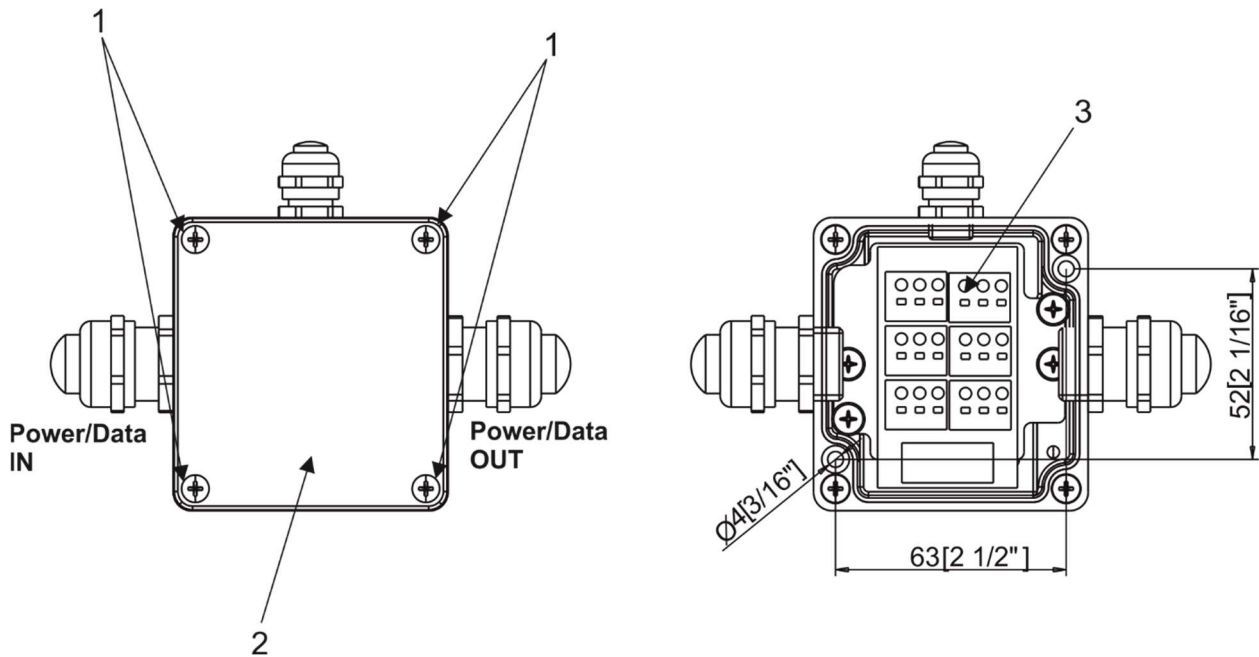

#### Junction box with four outputs

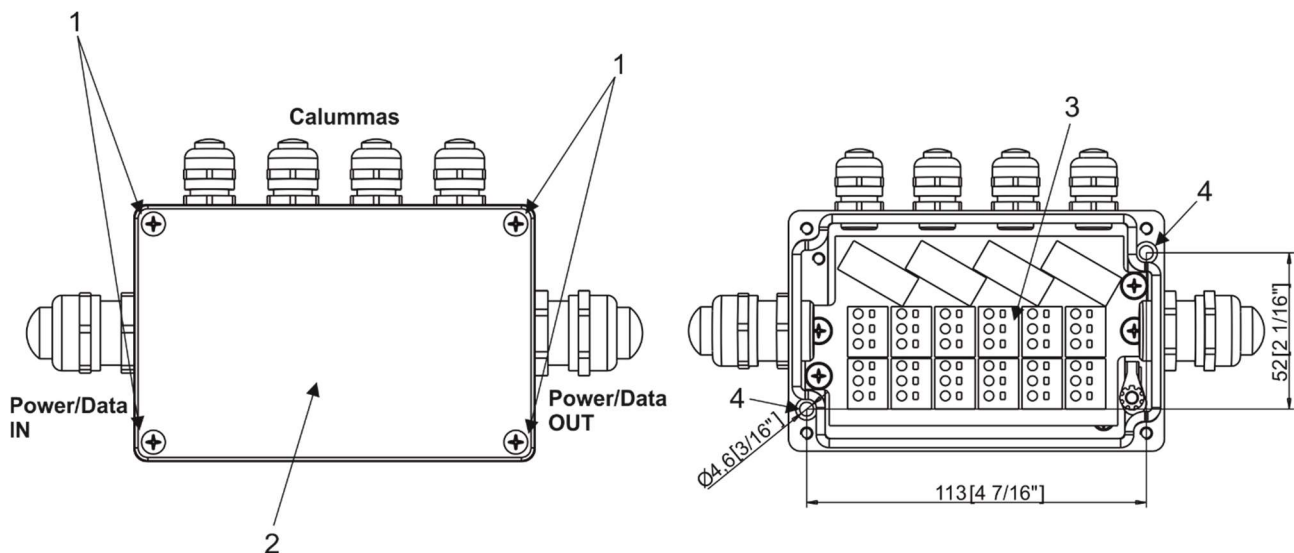

1. Unscrew the four screws (1) from the cover (2) on the junction box to get access to the DPS with terminal blocks (3) and two mounting holes (4).

2. Screw the junction box on a non-flammable flat surface.


3. Connect cables to terminal blocks.

Two cable glands M20 x 1.5 serves for a power/data cable. One (or four) cable gland M12 x 1.5 serves for Calumma XS connection cable.


Remove the end cap from the cable gland before passing the cable.

We recommend to apply an adequate layer of the paste LOCTITE 5331 on the plastic holder of the cable gland before inserting it into the body of the gland.

Cable gland M20x1.5 and M12x1.5

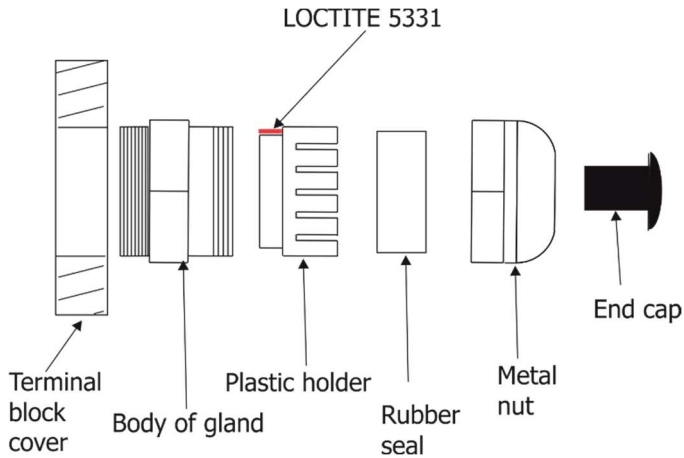


Wiring of connection blocks on DPS RB4232 in the junction box with one LED output.

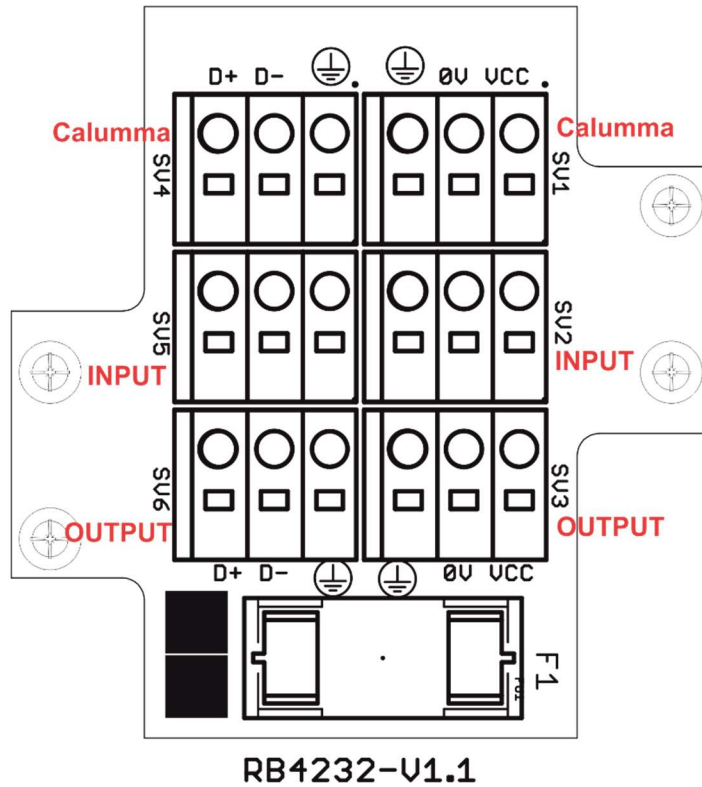

Fuse F1: 2A/500V AC.

## Calumma XS

Wiring of connection blocks on DPS RB4233 in the junction box with four LED outputs.

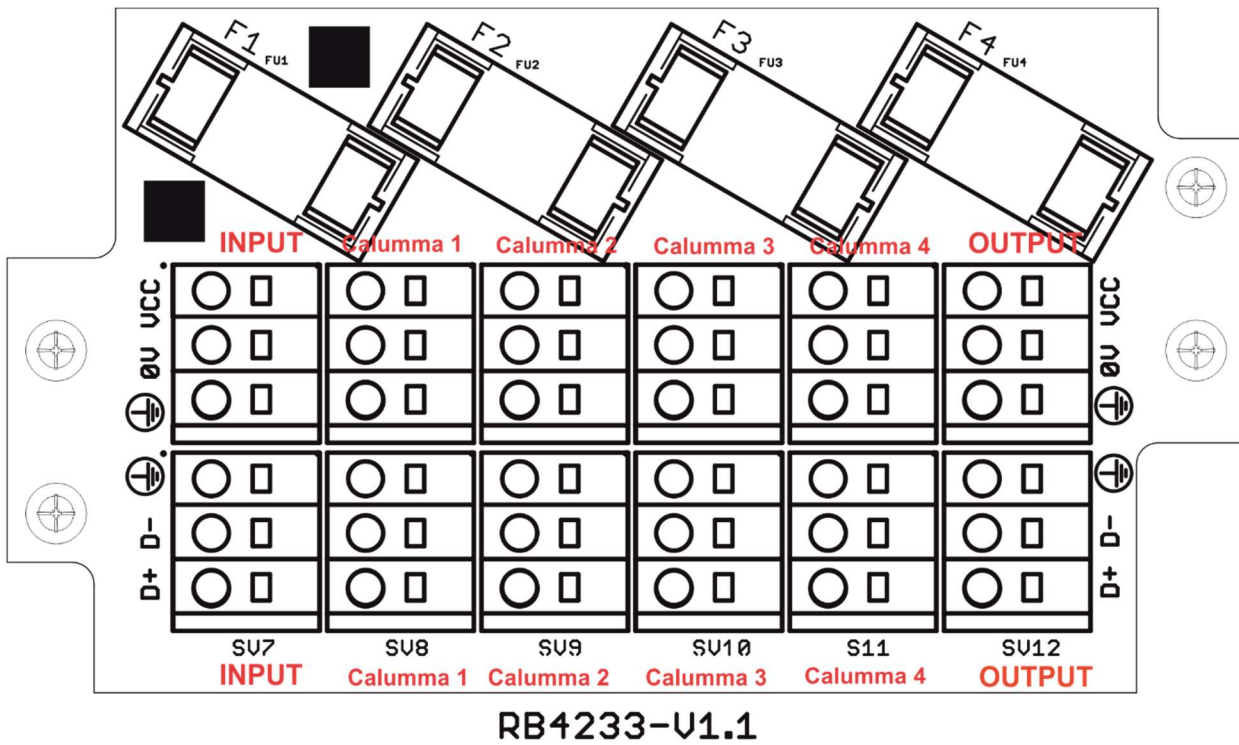

Fuse F1-F4: 2A/500V AC.

Calumma XS connection:

Connector	Vcc	D+	D-	0V	⏏
Function	LEDs +	Data +	Data -	LEDs -	Not connected
Colour of wire	Red	Orange	White	Black	

Colours of wires apply to the 5-cored cable UL 20969 5x 20AWG (P/N 13053481)

Connection between junction box and E-box Remote and among junction boxes:

Connector	Vcc	D+	D-	0V	⏏
Function	LEDs +	Data +	Data -	LEDs -	Not connected
Colour of wire	Red	Orange	White	Black	

Colours of wires apply to the 5-cored cable SJTW 5x 14AWG (P/N 1305 3336).



**NOTE:** Each line of Calummas XS connected to the LED output of the E-box Remote has to be terminated at the last fixture.

**EITHER** connect a 120 Ohm resistor between terminals D+ and D- in the last fixture,  
**OR** terminate via RDM as described in the E-box Remote user manual.

Ensure **ONLY** the last fixture in the line is terminated using **ONE** of the above methods!

Examples

Termination via 120 Ohm resistor

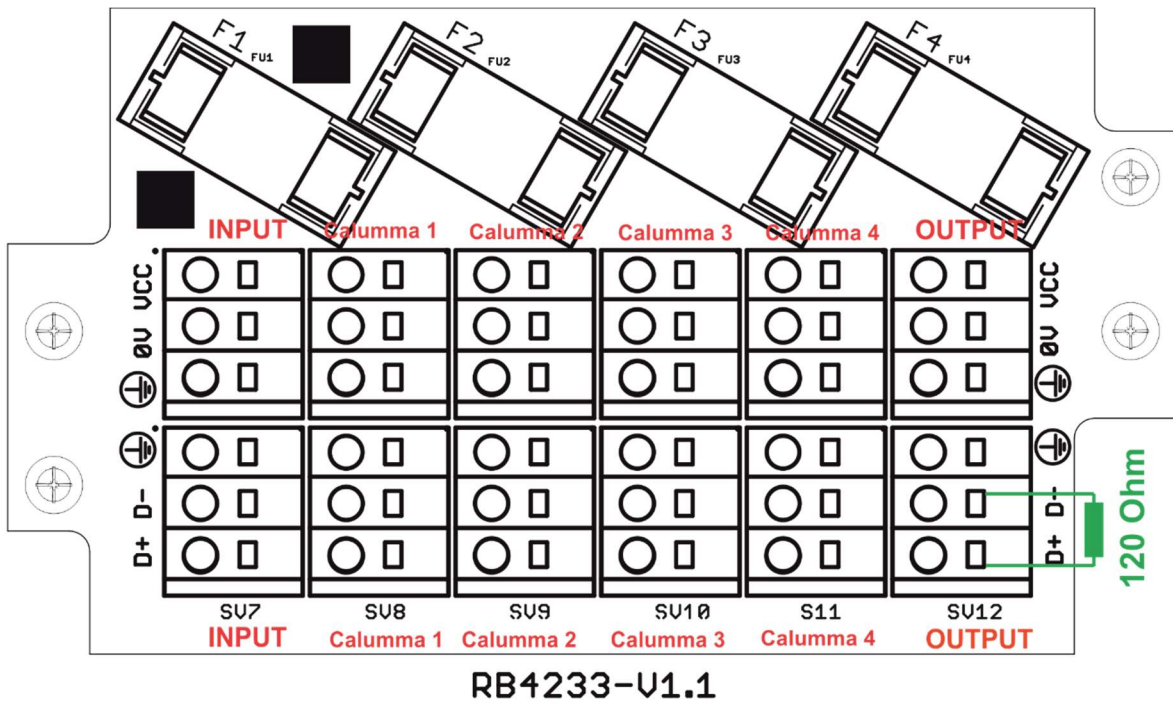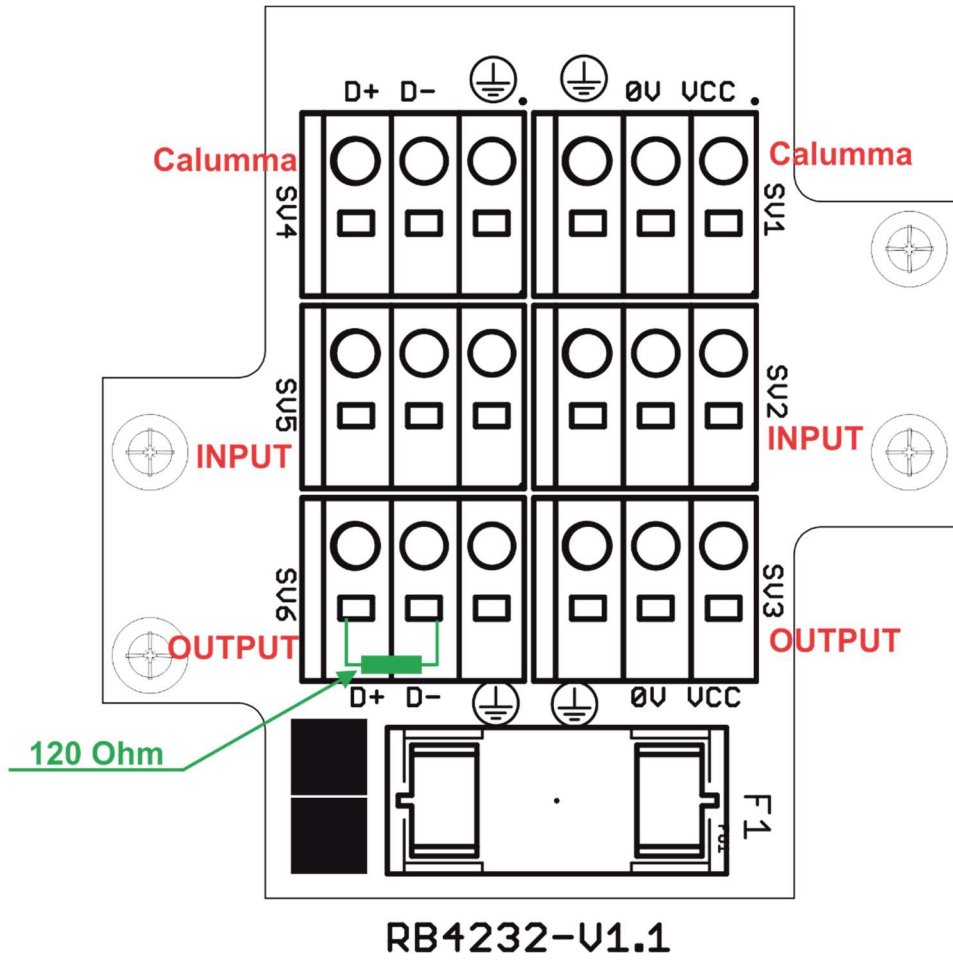

Termination via RDM:

A screenshot of a configuration interface. It features a light gray background with a darker gray horizontal bar. Inside this bar, the text "Terminator active (0-dis 1-en):" is followed by a white text input field containing the value "00". To the right of the input field is a small blue button with the text "(hex)" in white. A red rectangular box highlights the input field and the "(hex)" button.

4. Screw the cover (2) back on the junction box.

## 5. Software update

Software update of Calumma XS modules has to be done by means of the software ROBE Uploader running on PC. The ROBE Uploader is a software for automatized software update of ROBE fixtures. The ROBE Uploader switches Calummas XS to the update mode automatically.

Please see <https://www.robe.cz/robe-uploader/> for more information.

The Calummas XS have to be operated in the Pass-Through mode only.


To update Calummas XS including the E-box Remote.

1. Update connected LED modules by means of the file Calumma.lib in the ROBE Uploader.
2. Set the E-box Remote to the Standard mode and switch it off/on. Use the file EminereEbox.lib in the ROBE Uploader for software update of the E-box Remote.
3. After updating the E-box Remote, set the E-box Remote to the Pass-Through mode and switch it off/on.


For more information about updating please see the E-box Remote user manual and E-box Remote Base user manual.

### Examples of connection for software update

1. By means of DMX connection and Robe Universal Interface.

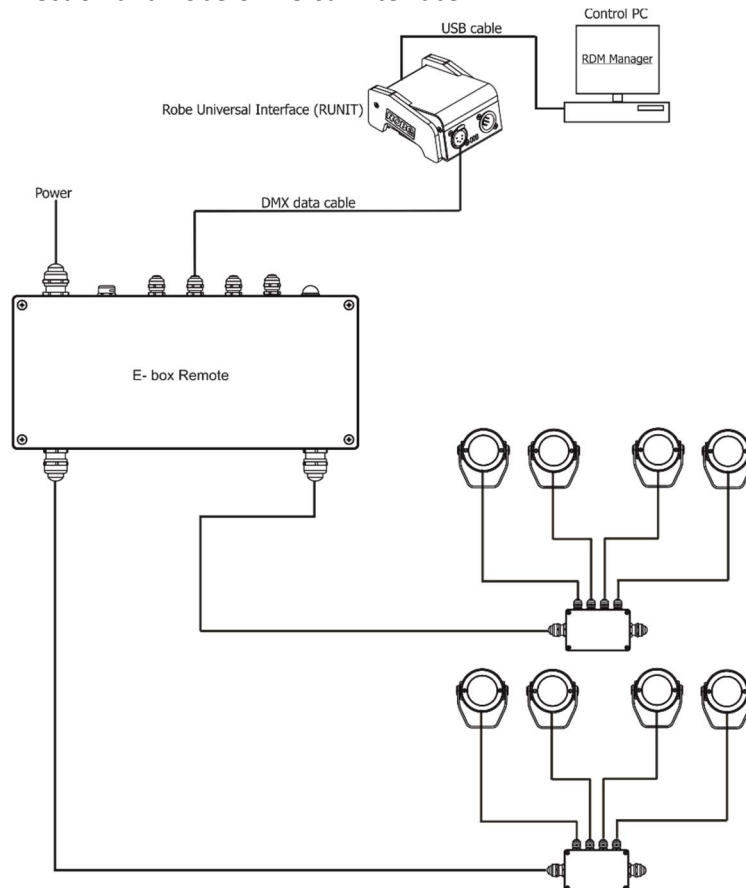

2. By means of the Ethernet connection

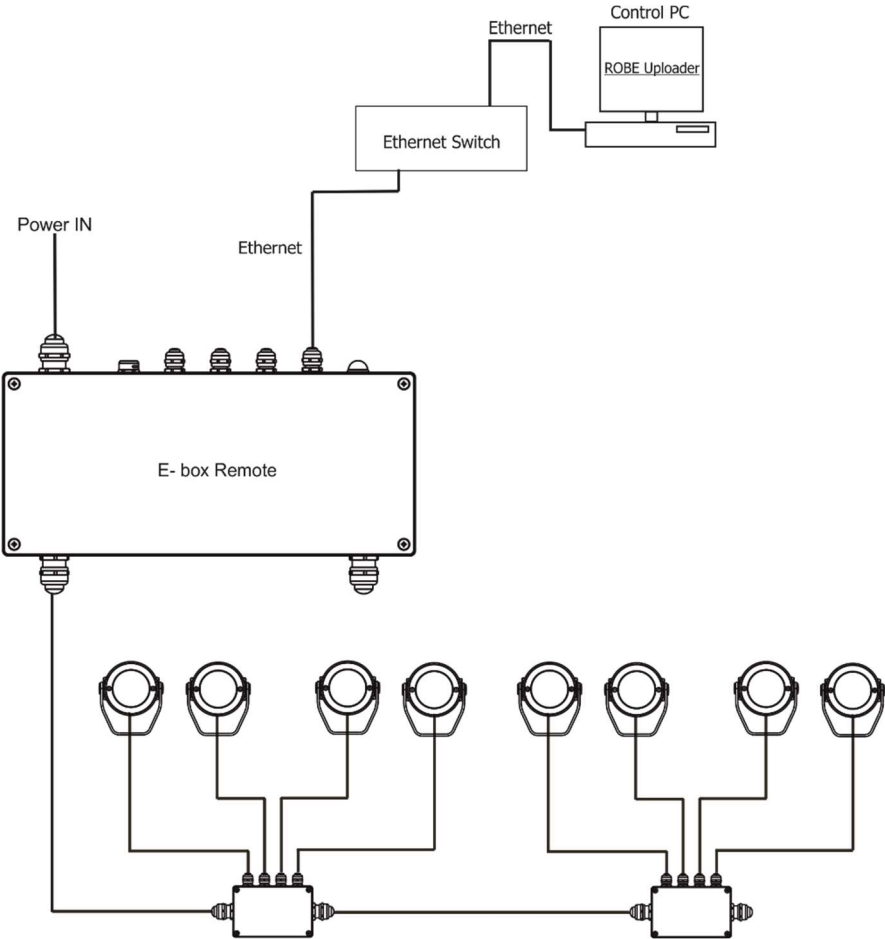

## 6. Technical specifications

### Power supply

- Input voltage: 48 V
- Power consumption:
  - Calumma XS MC: 10 W
  - Calumma XS SC: 10 W

### Optic

- Light source:
  - Calumma XS MC: one high power multichip LEDs
  - Calumma XS SC: 4 x high power single chip LED
- Colour variants Calumma XS MC: RGBW (W - 6500 K), RGBA, PW (W - 3000 K)
- Colour variants Calumma XS SC: PW (W - 3000 K)
- Beam Angle Calumma XS MC:
  - Symetrical: 9°, 12°, 15°, 25°, 30°, 45°, 65°, 100°
  - Bi-symetrical: 10° x 30°, 30° x 10°, 10° x 60°, 60° x 10°, 15° x 45°, 45° x 15°, 15° x 90°, 90° x 15°, 30° x 60°, 60° x 30°, 30° x 90°, 90° x 30°
- Beam Angle Calumma XS SC:
  - Symetrical: 10°, 15°, 25°, 30°, 45°, 65°, 100°
  - Bi-symetrical: 10° x 30°, 30° x 10°, 10° x 60°, 60° x 10°, 15° x 45°, 45° x 15°, 15° x 90°, 90° x 15°, 30° x 60°, 60° x 30°, 30° x 90°, 90° x 30°
- Projected Lumen Maintenance: L90B10 >90.000 hrs, Ta = 25°C / 77°F

### Compatible drivers

- E-box Remote
- E-box Remote Basic

### Mounting method

- Via yoke
- Adjustability: -180°/+180°

### Housing

- High pressure die-cast aluminium body
- Tempered glass

### Cooling system

- Convection

### Total heat dissipation

- Calumma XS MC: 25 BTU/h (calculated)
- Calumma XS SC: 25 BTU/h (calculated)

### Protection factor

- CE: IP 67 (IP 66 junction box)
- US: Suitable for wet location

### Impact rating

- IK10

### Operating ambient temperature range

- -20°C /+40°C (-4°F /+104°F)



## Calumma XS


### Connection

- Via E-box Remote/E-box Remote Basic  
Calumma IN: cable UL 20969 5x 20AWG (P/N 13053481), length 1m standard  
Interconnecting cable between junction boxes: SJTW 5x 14AWG (P/N 13053336)  
Junction Box for Calumma XS, (1x Output)  
Junction Box for Calumma XS, (4x Output)

### Weight


- Calumma XS MC: 0.59 kg (1.3 lbs)
- Calumma XS SC: 0.6 kg (1.3 lbs)

### Dimensions (All dimensions in mm [inch])

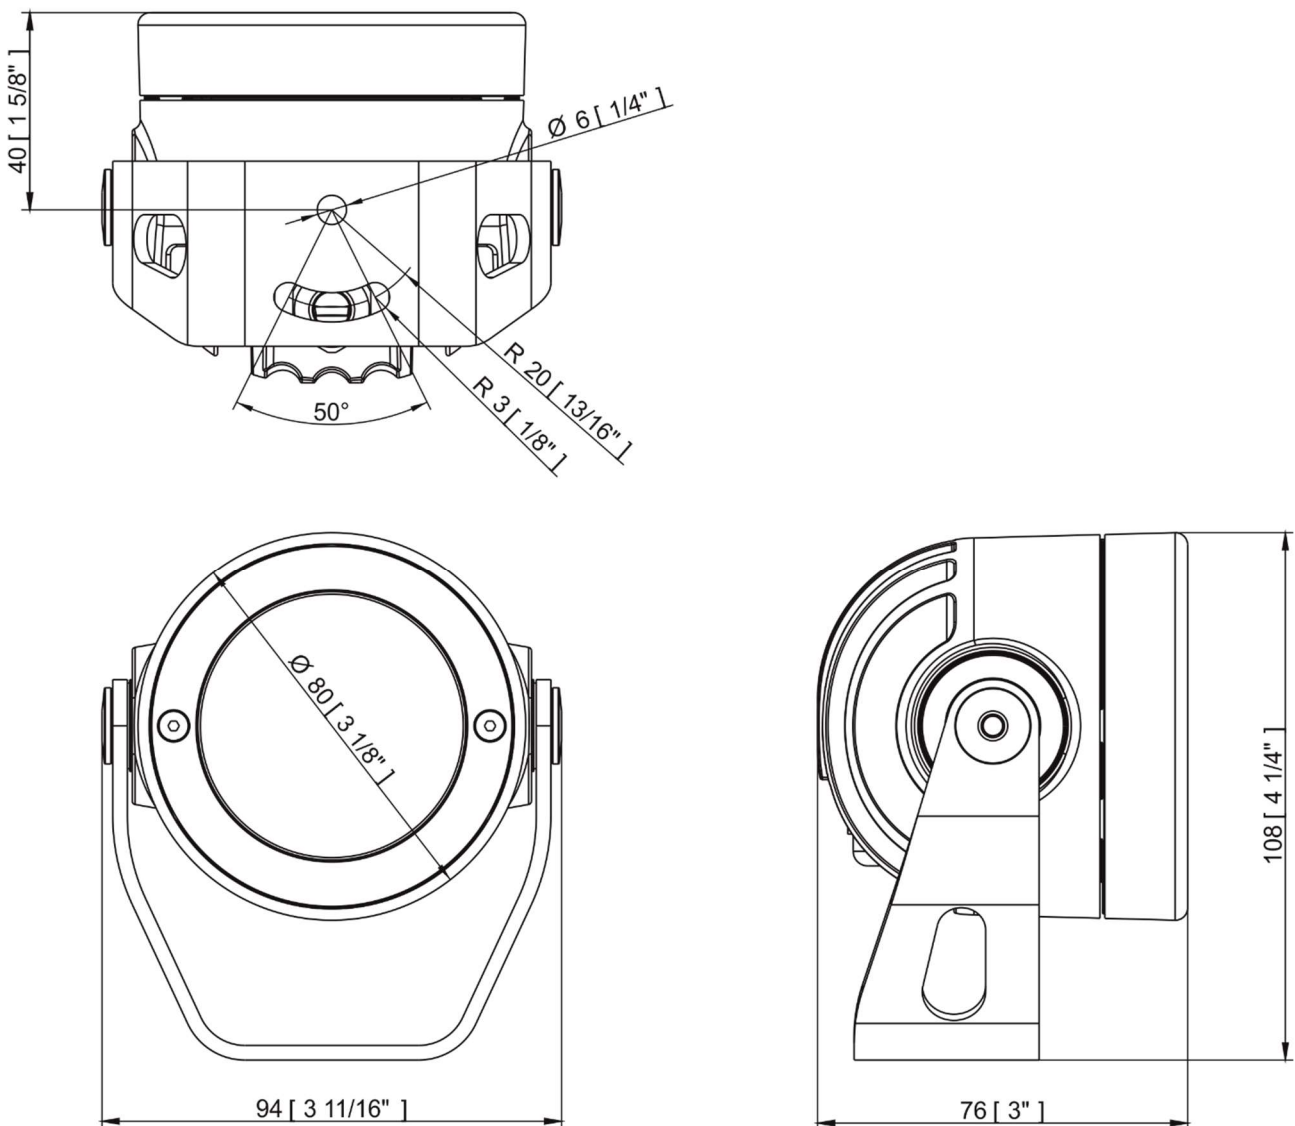


Calumma XS

Junction box with one output

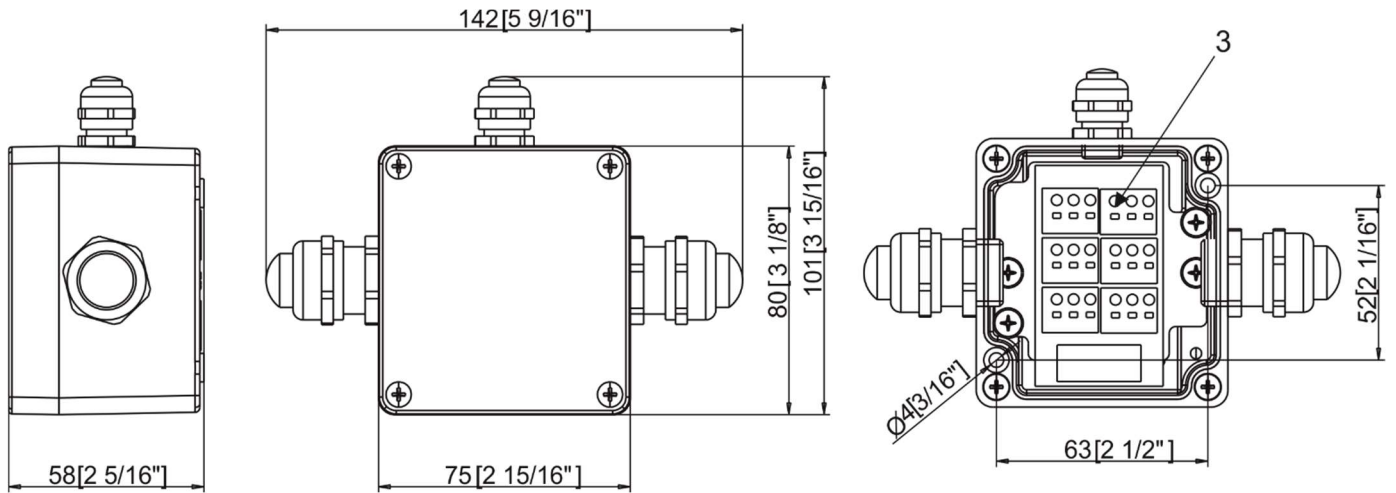

Junction box with four outputs

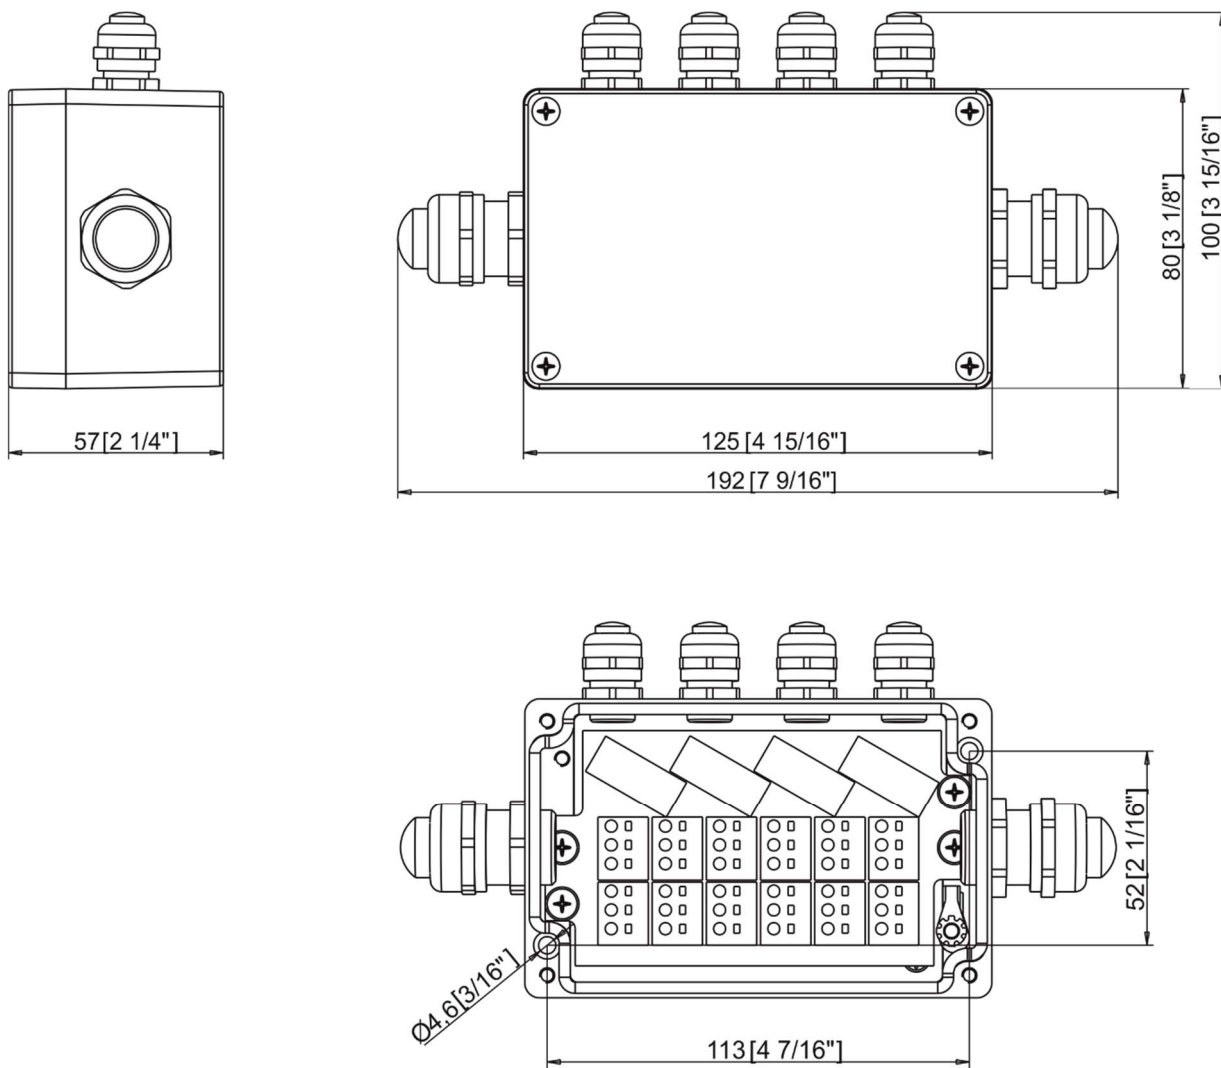

**Included items**

- 1 x Calumma XS MC / Calumma XS SC
- 1 x User manual

**Optional accessories**

Top Hat Calumma XS RAL9011 (P/N 10980732)

Half Top Hat Calumma XS RAL9011 (P/N 10980736)

Tenon Adaptor for Calumma XS

Pole Mount Bracket for Calumma XS

Junction Box for Calumma XS, 1x Output, Ral 9011 (P/N 10980715)

Junction Box for Calumma XS, 4x Output, Ral 9011 (P/N 10980716)

## 7. Cleaning and maintenance

***DANGER !***

***Disconnect from the mains before starting any maintenance or cleaning work***

Rinse off loose dirt with low pressure water spray. Wash the housing with a soft brush or sponge and a mild, non-abrasive washing detergent. Rinse it.

Maintenance and service operations are only to be carried out by a qualified person.

Should you need any spare parts, please use ROBE OEM parts.

### 7.1 Disposing of the product

To preserve the environment please dispose or recycle this product at the end of its life according to the local regulations and codes.

## 8. ChangeLog

This section summarizes changes in the user manual.

Version of manual	Date of issue	Description of changes
1.1	13/09/2022	Junction box connection change
1.2	13/10/2022	DMX chart ver. 1.1 added
1.3	14/10/2022	Numbers of connected Calummas to E-box changed
1.4	05/01/2022	Description of the software update changed
1.5	10/02/2023	DMX chart ver. 1.2 added
1.6	22/02/2023	Cable gland installation changed
1.7	10/03/2023	Beam angle 12° added at MC version
1.8	17/03/2023	EMC notes added

*Specifications are subject to change without notice.*

*March 17, 2023*

*Copyright © 2022-2023 Robe Lighting - All rights reserved*

Made in CZECH REPUBLIC by ROBE LIGHTING s.r.o. Palackeho 416/20 CZ 75701 Valasske Mezirici

## DMX protocol for Calumma - All sizes - MC and SC

Version: 1.2 (16 modes in total)

Mode/Channels in all								Mode 1- RGBW(A)-8bit, Mode 2- RGB 8-bit, Mode 3- full RGBW(A)		
1	2	3	4	5	6	7	8-10	Mode 4- White-full control, Mode 5- Reduced RGBW(A)		
4	3	12	3	6	8	15	Reserved	Mode 6- Reduced RGBW(A)+white control		
Mode/channels								RGBW/RGBA/RGB modes		
1	2	3	4	5	6	7	DMX Value	Function		Type of control
-	-	-	-	-	-	1		<b>Special functions</b>		
							0	No function	step	
								<i>To activate following functions , stop in DMX value for at least 3 sec.</i>		
							1-2	Save current DMX values to fixture as initial DMX values.	step	
							3-4	Show saved initial DMX values	step	
							5-6	Run factory demo sequences at switching fixture on (without DMX)	step	
							7-255	Reserved		
1	1	1	-	1	1	2		<b>Red</b>		
							0 - 255	Red LEDs saturation control (0-100%)	proportional	
-	-	2	-	-	-	3		<b>Red Fine</b>		
							0 - 255	Red LEDs saturation control fine	proportional	
2	2	3	-	2	2	4		<b>Green</b>		
							0 - 255	Green LEDs saturation control (0-100%)	proportional	
-	-	4	-	-	-	5		<b>Green Fine</b>		
							0 - 255	Green LEDs saturation control fine	proportional	
3	3	5	-	3	3	6		<b>Blue</b>		
							0 - 255	Blue LEDs saturation control (0-100%)	proportional	
-	-	6	-	-	-	7		<b>Blue Fine</b>		
							0 - 255	Blue LEDs saturation control fine	proportional	
4	-	7	-	4	4	8		<b>White (Amber)</b>		
							0 - 255	White LEDs saturation control (0-100%)	proportional	
-	-	8	-	-	-	9		<b>White (Amber) Fine</b>		
							0 - 255	White LEDs saturation control fine	proportional	
-	-	9	1	-	5	10		<b>Green correction</b>		
							0	Uncorrected white	step	
							1-127	Minus green - uncorrected white	proportional	
							128	Uncorrected white (128=default)	step	
							129-255	Uncorrected white - Plus green	proportional	
-	-	10	2	-	6	11		<b>Colour temperature correction (CTC)</b>		
							0	No function	step	
							1 - 10	Tungsten dimming 2700 K	step	
							11 - 20	Tungsten dimming 3200 K	step	
							21-255	Colour temperature changing from 1800 K --> 6500 K (21-1800K, 66-2700K, 91-3200K,141-4200K, 211-5600K, 255-6500K)	proportional	
-	-	-	-	-	-	12		<b>Virtual Colour Wheel</b>		
							0	No function	step	
							1-2	White 1800 K	step	
							3-4	White 2700 K	step	
							5-6	White 3200 K	step	

DMX protocol

Mode/channels							DMX Value	Function	Type of control
1	2	3	4	5	6	7			
							7-8	White 4200 K	step
							9-10	White 5600 K	step
							11-12	White 6500 K	step
							13	Blue (Blue=full, Red+Green+White/Amber=0)	step
							14-23	Red=0, Green->up, Blue =full, White/Amber=0	proportional
							24	Cyan (Red=0, Green=full, Blue =full, White/Amber=0)	step
							25-34	Red=0, Green=full, Blue->down, White/Amber=0	proportional
							35	Green (Red=0, Green=full, Blue =0, White/Amber=0)	step
							36-45	Red->up, Green=full, Blue=0, White/Amber=0	proportional
							46	Yellow (Red=full, Green=full, Blue=0, White/Amber=0)	step
							47-56	Red=full, Green->down, Blue=0, White/Amber=0	proportional
							57	Red(Red=full, Green=0, Blue=0, White/Amber=0)	step
							58-67	Red=full, Green=0, Blue->up, White/Amber=0	proportional
							68	Magenta (Red=full, Green=0, Blue=full, White/Amber=0)	step
							69-78	Red -> down, Green=0, Blue=full, White/Amber=0	proportional
							79	Blue (Red=0, Green=0, Blue=full, White/Amber=0)	step
								<b>Transition effects</b>	
							80-87	Rainbow effect (with fade time) from slow-> fast	proportional
							88-95	Rainbow effect (without fade time) from slow-> fast	proportional
							96-103	Full dynamic white (1800K->6500K->1800K) (with fade time) from slow-> fast	proportional
							104-111	Full dynamic white (1800K->6500K->1800K) (without fade time) from slow-> fast	proportional
							112-119	Dynamic warm white (1800K-3000K-1800K) (with fade time) from slow-> fast	proportional
							120-127	Dynamic warm white (1800K-3000K-1800K) (without fade time) from slow-> fast	proportional
							128-135	Rainbow effect + full dynamic white (with fade time) from slow-> fast	proportional
							136-143	Rainbow effect + full dynamic white (without fade time) from slow-> fast	proportional
							145-151	Blue/Green effect (with fade time) from slow-> fast	proportional
							152-159	Blue/Green effect (without fade time) from slow-> fast	proportional
							160-167	Red/Blue effect (with fade time) from slow-> fast	proportional
							168-175	Red/Blue effect (without fade time) from slow-> fast	proportional
							176-183	Green/Red effect (with fade time) from slow-> fast	proportional
							184-191	Green/Red effect (without fade time) from slow-> fast	proportional
							192-199	Blue/4000K effect (with fade time) from slow-> fast	proportional
							200-207	Blue/4000K effect (without fade time) from slow-> fast	proportional
							208-215	Green/4000K effect (with fade time) from slow-> fast	proportional
							216-223	Green/4000K effect (without fade time) from slow-> fast	proportional
							224-231	Red/4000K effect (with fade time) from slow-> fast	proportional
							232-239	Red/4000K effect (without fade time) from slow-> fast	proportional
						<b>13</b>		<b>Shutter/Strobe</b>	
							0-31	Shutter closed	step
							32-63	Shutter open	step
							64-95	Strobe-effect from slow to fast	proportional
							96-127	Shutter open	step
							128-143	Opening pulse in sequences from slow to fast	proportional
							144-159	Closing pulse in sequences from fast to slow	proportional

DMX protocol

Mode/channels							DMX Value	Function	Type of control
1	2	3	4	5	6	7			
							160-191	Shutter open	step
							192-223	Random strobe-effect from slow to fast	proportional
							224-255	Shutter open	step
-	-	11	3	5	7	14		<b>Dimmer</b>	
							0 - 255	Light intensity coarse (0-100%)	proportional
-	-	12	-	6	8	15		<b>Dimmer Fine</b>	
							0 - 255	Light intensity fine	proportional
Copyright © 2022-2023 Robe Lighting s.r.o. - All rights reserved									
All Specifications subject to change without notice									

<b>DMX protocol for Calumma - All sizes - MC and SC</b>					
Version: 1.2 (16 modes in total)					
<b>Mode/Channels in all</b>				<b>TW Modes: Mode 6- White selection + Dimmer, Mode 7- WW + CW</b>	
<b>11</b>	<b>12</b>	<b>13</b>	<b>14-16</b>	<b>PW Mode: Mode 8- Dimmer</b>	
3	4	2	Reserved		
<b>TW and PW modes</b>					
<b>Mode/channels</b>			<b>DMX Value</b>	<b>Function</b>	<b>Type of control</b>
<b>11</b>	<b>12</b>	<b>13</b>			
<b>1</b>	-	-		<b>White colour selection</b>	
			0 - 255	White from 2700 K - 6500 K	proportional
-	<b>1</b>	-		<b>Warm White</b>	
			0 - 255	Warm White LEDs saturation control (0-100%)	proportional
-	<b>2</b>	-		<b>Cool White</b>	
			0 - 255	Cool White LEDs saturation control (0-100%)	proportional
<b>2</b>	<b>3</b>	<b>1</b>		<b>Dimmer</b>	
			0 - 255	Light intensity coarse (0 - 100%)	proportional
<b>3</b>	<b>4</b>	<b>2</b>		<b>Dimmer Fine</b>	
			0 - 255	Light intensity fine	proportional
Copyright © 2022-2023 Robe Lighting s.r.o. - All rights reserved					
All Specifications subject to change without notice					